



Operation & Safety Manual

*Original Instructions -
Keep this manual with the machine at all times.*

E450AJ

PVC 2301

31221340

March 1, 2024 - Rev C

ANSI / CE UK CA  EAC
AS/NZS MOL70

JLG®
An Oshkosh Corporation Company

WARNING

Operating, servicing and maintaining this vehicle or equipment can expose you to chemicals including engine exhaust, carbon monoxide, phthalates, and lead, which are known to the State of California to cause cancer and birth defects or other reproductive harm. To minimize exposure, avoid breathing exhaust, do not idle the engine except as necessary, service your vehicle or equipment in a well-ventilated area and wear gloves or wash your hands frequently when servicing. For more information go to www.P65Warnings.ca.gov.

FOREWORD

The Mobile Elevating Work Platform (MEWP) models covered in this manual are designed and tested to meet or exceed various compliance standards. Please refer to the manufacturer's nameplate affixed to the subject MEWP for specific standard compliance information.

This manual is a very important tool! Keep it with the machine at all times.

The purpose of this manual is to provide owners, users, operators, lessors, and lessees with the precautions and operating procedures essential for the safe and proper machine operation for its intended purpose.

Due to continuous product improvements, JLG Industries, Inc. reserves the right to make specification changes without prior notification. Contact JLG Industries, Inc. for updated information.

Refer to www.JLG.com for Warranty, Product Registration, and other machine-related documentation.

SAFETY ALERT SYMBOLS AND SAFETY SIGNAL WORDS



This is the Safety Alert Symbol. It is used to alert you to the potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

! DANGER

Indicates an imminently hazardous situation. If not avoided, will result in serious injury or death. This decal will have a red background.

! WARNING

Indicates a potentially hazardous situation. If not avoided, could result in serious injury or death. This decal will have an orange background.

! CAUTION

Indicates a potentially hazardous situation. If not avoided, may result in minor or moderate injury. It may also alert against unsafe practices. This decal will have a yellow background.

NOTICE

Indicates information or a company policy that relates directly or indirectly to the safety of personnel or protection of property.

WARNING

This product must comply with all safety related bulletins. Contact JLG Industries, Inc. or the local authorized JLG representative for information regarding safety related bulletins which may have been issued for this product.

NOTICE

JLG Industries, Inc. sends safety related bulletins to the owner of record of this machine. Contact JLG Industries, Inc. to ensure that the current owner records are updated and accurate.

NOTICE

JLG Industries, Inc. must be notified immediately in all instances where JLG products have been involved in an accident involving bodily injury or death or when substantial damage has occurred to personal property or the JLG product.

Foreword

For:

- Accident Reporting
- Product Safety Publications
- Current Owner Updates
- Questions Regarding Product Safety
- Standards and Regulations Compliance Information
- Questions Regarding Special Product Applications
- Questions Regarding Product Modifications

Contact:

Product Safety and Reliability Department

JLG Industries, Inc.

13224 Fountainhead Plaza

Hagerstown, MD 21742

USA

or Visit www.jlg.com to find your local JLG office.

In USA:

Toll Free: 877-JLG-SAFE (877-554-7233)

Outside USA:

Phone: 240-420-2661

Fax: 301-745-3713

E-mail: ProductSafety@JLG.com

REVISION LOG

Date	Revision	Description
January 9, 2023	A	Original Issue
June 2, 2023	B	Revision
March 1, 2024	C	Revision

Other Publications Available

Publication	Publication Number
Service & Maintenance Manual	31221341
Illustrated Parts Manual	31221342

This Page is intentionally left blank

SECTION CONTENTS

Section	Subject	Page
FOREWORD		3
REVISION LOG		7
SECTION 1		
SAFETY PRECAUTIONS		13
1.1	General	13
1.2	Pre-Operation	13
1.3	Operation	15
1.4	Towing, Lifting, and Hauling	22
1.5	Maintenance	22
SECTION 2		
USER RESPONSIBILITIES, MACHINE PREPARATION, AND INSPECTION		25
2.1	Personnel Training	25
2.2	Preparation, Inspection, and Maintenance	26
2.3	Machine Components	28
2.4	Pre-Start Inspection	28
2.5	Walk-Around Inspection	30
2.6	Function Check	31
2.7	SkyGuard® Function Test	33
SECTION 3		
MACHINE CONTROLS AND INDICATORS		35
3.1	General	35
3.2	Controls and Indicators	36
3.3	Ground Control Station	36
3.4	Platform Control Station	39
3.5	Platform Control Indicator Panel	44
3.6	Battery Charger	47

SECTION 4	
MACHINE OPERATION	49
4.1 General	49
4.2 Operating Characteristics and Limitations.....	49
4.3 Stability.....	49
4.4 Motor Operation	51
4.5 Traveling (Driving)	51
4.6 Traveling (Grade/Side Slope)	53
4.7 Steering.....	54
4.8 Platform.....	54
4.9 Boom	57
4.10 Battery Charging	58
4.11 Inverter	58
4.12 Function Speed Control	59
4.13 USB Charging Port	59
4.14 Machine Safety System Override (MSSO) (If Equipped)	60
4.15 SkyGuard Operation	60
4.16 Boom Synchronizing Procedure.....	63
4.17 Shut Down and Park	63
4.18 Lifting and Tie Down	64
4.19 Lifting Chart	65
4.20 E450AJ Safety Decals	65
SECTION 5	
EMERGENCY PROCEDURES	71
5.1 General	71
5.2 Incident Notification	71
5.3 Emergency Operation	72
5.4 Emergency Towing Procedures	72
5.5 Manual Descent System	73
5.6 Manual Swing Override	73
5.7 Machine Safety System Override (MSSO) (If Equipped)	74
SECTION 6	
ACCESSORIES	75
6.1 Available Accessories and Relationship Table.....	75
6.2 Bolt-On External Fall Arrest.....	79
6.3 Fall Arrest Platform	81

6.4	Pipe Racks	81
6.5	Platform Work Lights	83
6.6	Platform Work Surface	84
6.7	SkySense®	85
6.8	SkySense® Platform Bumper Padding	90
6.9	Soft Touch	90

SECTION 7

GENERAL SPECIFICATIONS AND OPERATOR

MAINTENANCE 93

7.1	General	93
7.2	Operating Specifications	93
7.3	Operator Maintenance and Lubrication Diagram	97
7.4	Operator Maintenance and Lubrication	98
7.5	Battery Charger	103
7.6	Battery Maintenance and Charging	104
7.7	Tires and Wheels	106
7.8	Supplemental Information Only Applicable to CE/UKCA Machines	108
7.9	EC Declaration of Conformity	109
7.10	UKCA Declaration of Conformity	110

This Page is intentionally left blank

SECTION 1

Safety Precautions

1.1 GENERAL

This section outlines the necessary precautions for proper and safe machine usage and maintenance. It is mandatory that a daily routine is established based on the content of this manual to promote proper machine usage. A maintenance program, using the information provided in this manual and the Service & Maintenance Manual, must also be established by a qualified person and must be followed to ensure that the machine is safe to operate.

The owner/user/operator/lessor/lessee of the machine must not accept operating responsibility until this manual has been read, training is accomplished, and operation of the machine has been completed under the supervision of an experienced and qualified operator.

This section contains the responsibilities of the owner, user, operator, lessor, and lessee concerning safety, training, inspection, maintenance, application, and operation. If there are any questions with regard to safety, training, inspection, maintenance, application, and operation, please contact JLG Industries, Inc. ("JLG").


⚠ WARNING

Failure to comply with the safety precautions listed in this manual could result in machine damage, property damage, personal injury or death.

1.2 PRE-OPERATION

1.2.1 Operator Training and Knowledge

- Read, understand, and study the Operation and Safety Manual in its entirety before operating the machine. For clarification, questions, or additional information regarding any portions of this manual, contact JLG Industries, Inc.

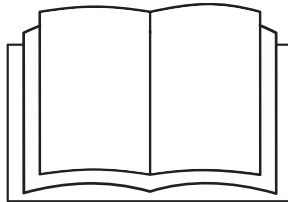

- Only personnel who have received proper training regarding the inspection, application and operation of MEWPs (including recognizing and avoiding hazards associated with their operation) shall be authorized to operate a MEWP.

Safety Precautions

- Only properly trained personnel who have received unit-specific familiarization shall operate a MEWP. The user shall determine if personnel are qualified to operate the MEWP prior to operation.
- Read, understand, and obey all DANGERS, WARNINGS, CAUTIONS, and operating instructions on the machine and in this manual.
- Ensure that the machine is to be used in a manner which is within the scope of its intended application as determined by JLG.
- All operating personnel must have a thorough understanding of the intended purpose and function of the MEWP controls, including platform, ground and emergency descent controls.
- Read, understand, and obey all applicable employer, local, and governmental regulations as they pertain to your utilization and application of the machine.

1.2.2 Workplace Inspection

- Precautions to avoid all hazards in the work area must be taken by the user before and during operation of the machine.
- Do not operate or raise the platform from a position on trucks, trailers, railway cars, floating vessels, scaffolds or other equipment unless the application is approved in writing by JLG.
- Before operation, check work area for overhead hazards such as electric lines, bridge cranes, and other potential overhead obstructions.
- Check operating surfaces for holes, bumps, drop-offs, obstructions, debris, concealed holes, and other potential hazards.
- Check the work area for hazardous locations. Do not operate the machine in hazardous environments unless approved for that purpose by JLG.
- Ensure that the ground conditions are adequate to support the maximum tire load indicated on the tire load decals located on the chassis adjacent to each wheel. Do not travel on unsupported surfaces.

1.2.3 Machine Inspection

- Do not operate this machine until the inspections and functional checks as specified in the User Responsibilities, Machine Preparation, and Inspection Section of this manual have been performed.
- Do not operate this machine until it has been serviced and maintained according to the maintenance and inspection requirements as specified in the machine's Service Manual.
- Ensure all safety devices are operating properly. Modification of these devices is a safety violation.

WARNING

Modification or alteration of a MEWP shall be made only with prior written permission from the manufacturer.

- Do not operate any machine on which the safety or instruction placards or decals are missing or illegible.
- Check the machine for modifications to original components. Ensure that any modifications have been approved by JLG.
- Avoid accumulation of debris on platform floor. Keep mud, oil, grease, and other slippery substances from footwear and platform floor.

1.3 OPERATION

1.3.1 General


- Machine operation requires your full attention. Bring the machine to a full stop before using any device, i.e. cell phones, two-way radios, etc. that will distract your attention from safely operating the machine.
- Do not use the machine for any purpose other than positioning personnel, their tools, and equipment.
- Before operation, the user must be familiar with the machine capabilities and operating characteristics of all functions.
- Never operate a malfunctioning machine. If a malfunction occurs, shut down the machine. Remove the unit from service and notify the proper authorities.
- Do not remove, modify, or disable any safety devices.
- Never slam a control switch or lever through neutral to an opposite direction. Always return switch to neutral and stop before moving the switch to the next function. Operate controls with slow and even pressure.
- Do not allow personnel to tamper with or operate the machine from the ground with personnel in the platform, except in an emergency.
- Do not carry materials directly on platform railing unless approved by JLG.
- When two or more persons are in the platform, the operator shall be responsible for all machine operations.
- Always ensure that power tools are properly stowed and never left hanging by their cord from the platform work area.
- When driving, always position boom over rear axle in line with the direction of travel. Remember, if boom is over the front axle, steer and drive functions will be reversed.
- Do not assist a stuck or disabled machine by pushing or pulling except by pulling at the chassis tie-down lugs.

Safety Precautions


- Fully lower platform and shut off all power before leaving machine.
- Remove all rings, watches, and jewelry when operating machine. Do not wear loose fitting clothing or long hair unrestrained which may become caught or entangled in equipment.
- Persons under the influence of drugs or alcohol or who are subject to seizures, dizziness or loss of physical control must not operate this machine.
- Hydraulic cylinders are subject to thermal expansion and contraction. This may result in changes to the platform position while the machine is stationary. Factors affecting thermal movement can include the length of time the machine will remain stationary, hydraulic oil temperature, ambient air temperature, and platform position.

1.3.2 Trip and Fall Hazards

- Before operating the machine, ensure all gates are closed and fastened in their proper position.

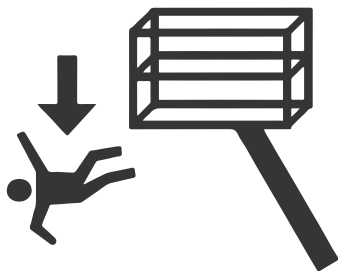

- During operation, occupants in the platform must wear a full body harness with a lanyard attached to an authorized lanyard anchorage point. Attach only one (1) lanyard per lanyard anchorage point.


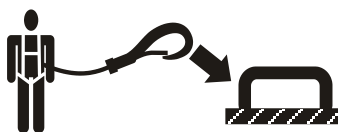


- Enter and exit only through gate area. Use extreme caution when entering or leaving platform. Ensure that the platform assembly is fully lowered. Face the platform when entering or leaving the platform. Always maintain “three point contact” with the machine, using two hands and one foot or two feet and one hand at all times during entry and exit.

- Keep both feet firmly positioned on the platform floor at all times. Never position ladders, boxes, steps, planks, or similar items on unit to provide additional reach for any purpose.
- Keep oil, mud, and slippery substances cleaned from footwear and the platform floor.

1.3.3 Electrocution Hazards

- This machine is not insulated and does not provide protection from contact with or proximity to electrical current.
- It is not recommended to use the machine during lightning. To prevent injury or machine damage if lightning occurs during operation, lower the boom and shut down the machine in a safe and secure location.

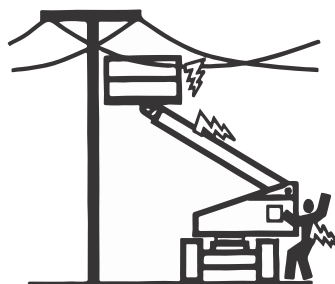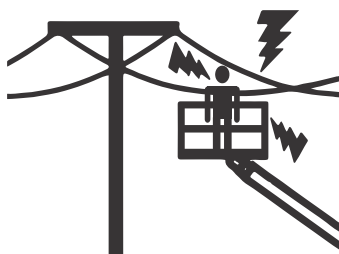

- Maintain distance from electrical lines, apparatus, or any energized (exposed or insulated) parts according to the Minimum Approach Distance (MAD) as shown in [Table — Minimum Approach Distances \(MAD\), page 17](#).
- Allow for machine movement and electrical line swaying.

Table 1. Minimum Approach Distances (MAD)

Voltage Range (Phase to Phase)	Minimum Approach Distance in Feet (Meters)
0 to 50 KV	10 (3)
Over 50K V to 200 KV	15 (5)
Over 200 KV to 350 KV	20 (6)
Over 350 KV to 500 KV	25 (8)
Over 500 KV to 750 KV	35 (11)

Table 1. Minimum Approach Distances (MAD) (continued)

Voltage Range (Phase to Phase)	Minimum Approach Distance in Feet (Meters)
Over 750 KV to 1000 KV	45 (14)
Note: This requirement shall apply except where employer, local or governmental regulations are more stringent.	


- Maintain a clearance of at least 10 ft (3m) between any part of the machine and its occupants, their tools, and their equipment from any electrical line or apparatus carrying up to 50,000 volts. One foot additional clearance is required for every additional 30,000 volts or less.
- The MAD may be reduced if insulating barriers are installed to prevent contact, and the barriers are rated for the voltage of the line being guarded. These barriers shall not be part of (or attached to) the machine.
- The MAD shall be reduced to a distance within the designed working dimensions of the insulating barrier. This determination shall be made by a qualified person with respect to electrical transmission and distribution in accordance with the employer, local, or governmental requirements for work practices near energized equipment.

 DANGER

Do not maneuver machine or personnel inside prohibited zone (MAD). Assume all electrical parts and wiring are energized unless known otherwise.

1.3.4 Tipping Hazards

- Ensure that the ground conditions are adequate to support the maximum tire load indicated on the tire load decals located on the chassis adjacent to each wheel. Do not travel on unsupported surfaces.
- The user must be familiar with the operating surface before driving. Do not exceed the allowable side slope and grade while driving.

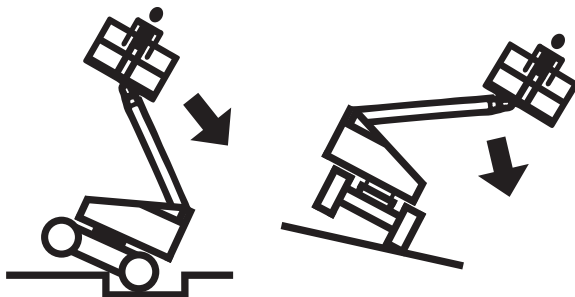

- Do not elevate platform or drive with platform elevated while on or near a sloping, uneven, or soft surface.
- Ensure machine is positioned on a smooth, firm surface within the limits of the maximum operating slope before elevating platform or driving with the platform in the elevated position.
- Before driving on floors, bridges, trucks, and other surfaces, check allowable capacity of the surfaces.
- Never exceed the maximum platform capacity as specified on the platform. Keep all loads within the confines of the platform, unless authorized by JLG.
- Keep the chassis of the machine a minimum of 2 ft (0.6m) from holes, bumps, drop-offs, obstructions, debris, concealed holes, and other potential hazards at the ground level.
- Do not push or pull any object with the boom.
- Never attempt to use the machine as a crane. Do not tie-off machine to any adjacent structure. Never attach wire, cable, or any similar items to platform.
- If boom assembly or platform is in a position that one or more wheels are off the ground, all persons must be removed before attempting to stabilize the machine. Use cranes, forklift trucks, or other appropriate equipment to stabilize machine.
- Do not operate the machine when wind conditions, including gusts, exceed 28 mph (12.5 m/s). Refer to [Table — Beaufort Scale \(For Reference Only\)](#), page 21. Factors affecting wind speed are; platform elevation, surrounding structures, local weather events, and approaching storms.
- Wind speed can be significantly greater at height than at ground level.
- Wind speed can change rapidly. Always consider approaching weather events, the time required to lower the platform, and methods to monitor current and potential wind conditions.
- Do not cover or increase surface area of the platform or the load. Do not carry large surface area items in the platform when operating outdoors. The addition of such items increases the exposed wind area of the machine. Increased areas exposed to wind will decrease stability.
- Do not increase the platform size with unauthorized modifications or attachments.

WARNING


Do not operate the machine when wind conditions exceed specifications shown in the General Specifications section of this manual or as shown on the capacity placard on the platform billboard.

Table 2. Beaufort Scale (For Reference Only)

Beaufort Number	Wind Speed		Description	Land Conditions
	mph	m/s		
0	0	0-0.2	Calm	Calm. Smoke rises vertically
1	1-3	0.3-1.5	Light air	Wind motion visible in smoke
2	4-7	1.6-3.3	Light breeze	Wind felt on exposed skin. Leaves rustle
3	8-12	3.4-5.4	Gentle breeze	Leaves and smaller twigs in constant motion
4	13-18	5.5-7.9	Moderate breeze	Dust and loose paper raised. Small branches begin to move.
5	19-24	8.0-10.7	Fresh breeze	Smaller trees sway.
6	25-31	10.8-13.8	Strong breeze	Large branches in motion. Flags waving near horizontal. Umbrella use becomes difficult.
7	32-38	13.9-17.1	Near Gale/ Moderate Gale	Whole trees in motion. Effort needed to walk against the wind.
8	39-46	17.2-20.7	Fresh Gale	Twigs broken from trees. Cars veer on road.
9	47-54	20.8-24.4	Strong Gale	Light structure damage.

1.3.5 Crushing and Collision Hazards

- Approved head gear must be worn by all operating and ground personnel.
- Watch for obstructions around machine and overhead when driving. Check clearances above, on sides, and bottom of platform during all operations.

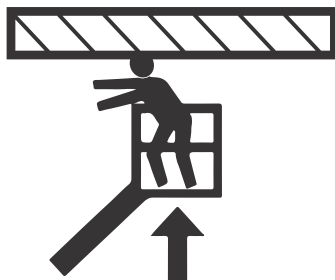

- During operation, keep all body parts inside platform railing.
- Use the boom functions, not the drive function, to position the platform close to obstacles.

Safety Precautions

- Always post a lookout when driving in areas where vision is obstructed.
- Keep non-operating personnel at least 6 ft (1.8 m) away from machine during all operations.
- Under all travel conditions, the operator must limit travel speed according to conditions of ground surface, congestion, visibility, slope, location of personnel, and other factors.
- Be aware of stopping distances in all drive speeds. When driving in high speed, reduce drive speed before stopping. Travel grades in low speed only.
- Do not use high speed drive in restricted or close quarters or when driving in reverse.
- Exercise extreme caution at all times to prevent obstacles from striking or interfering with operating controls and persons in the platform.
- Ensure that operators of other overhead and floor level machines are aware of the MEWP's presence. Disconnect power to overhead cranes. Barricade floor area if necessary.
- Do not operate over ground personnel. Warn personnel not to work, stand, or walk under a raised boom or platform. Position barricades on floor if necessary.

1.4 TOWING, LIFTING, AND HAULING

- Never allow personnel in platform while towing, lifting, or hauling.
- This machine should not be towed, except in the event of emergency, malfunction, power failure, or loading/unloading. Refer to the Emergency Procedures section of this manual for emergency towing procedures.
- Ensure boom is in the stowed position and, if equipped, the turntable locked prior to towing, lifting or hauling. The platform must be completely empty of tools.
- When lifting machine, lift only at designated areas of the machine. Lift the unit with equipment of adequate capacity.
- Refer to the Machine Operation section of this manual for lifting information.

1.5 MAINTENANCE

This sub-section contains general safety precautions which must be observed during maintenance of this machine. Additional precautions to be observed during machine maintenance are inserted at the appropriate points in this manual and in the Service and Maintenance Manual. It is of utmost importance that maintenance personnel pay strict attention to these precautions to avoid possible injury to personnel or damage to the machine or property. A maintenance program must be established by a qualified person and must be followed to ensure that the machine is safe.

1.5.1 Maintenance Hazards

- Shut off power to all controls and ensure that all moving parts are secured from inadvertent motion prior to performing any adjustments or repairs.
- Never work under an elevated platform until it has been fully lowered to the full down position, if possible, or otherwise supported and restrained from movement with appropriate safety props, blocking, or overhead supports.
- DO NOT attempt to repair or tighten any hydraulic hoses or fittings while the machine is powered on or when the hydraulic system is under pressure.
- Always relieve hydraulic pressure from all hydraulic circuits before loosening or removing hydraulic components.
- DO NOT use your hand to check for leaks. Use a piece of cardboard or paper to search for leaks. Wear gloves to help protect hands from spraying fluid.



- Use only replacement parts or components that are approved by JLG. To be considered approved, replacement parts or components must be identical or equivalent to original parts or components.
- Never attempt to move heavy parts without the aid of a mechanical device. Do not allow heavy objects to rest in an unstable position. Ensure adequate support is provided when raising components of the machine.
- Do not use machine as a ground for welding.
- When performing welding or metal cutting operations, precautions must be taken to protect the chassis from direct exposure to weld and metal cutting spatter.
- Do not refuel combustion engine-powered machines with the engine running.
- Use only approved non-flammable cleaning solvents.
- Do not replace items critical to stability, such as batteries or solid tires, with items of different weight or specification. Do not modify the MEWP in any way to affect stability.
- Refer to the Service & Maintenance Manual for the weights of critical stability items.

WARNING

Modification or alteration of a MEWP shall be made only with prior written permission from the manufacturer.

1.5.2 Battery Hazards

- Always disconnect batteries when servicing electrical components or when performing welding on the machine.
- Do not allow smoking, open flame, or sparks near battery during charging or servicing.
- Do not contact tools or other metal objects across the battery terminals.
- Always wear hand, eye, and face protection when servicing batteries. Ensure that battery acid does not come in contact with skin or clothing.

CAUTION

Battery fluid is highly corrosive. Avoid contact with skin and clothing at all times. Immediately rinse any contacted area with clean water and seek medical attention.

- Charge batteries only in a well ventilated area.
- Avoid overfilling the battery fluid level. Add distilled water to batteries only after the batteries are fully charged.

SECTION 2

User Responsibilities, Machine Preparation, and Inspection

2.1 PERSONNEL TRAINING

The Mobile Elevating Work Platform (MEWP) is a personnel handling device, so it is necessary that it be operated and maintained only by trained personnel.

2.1.1 Operator Training

Operator training must cover:

1. Reading and understanding the Operation and Safety Manual.
2. Thorough understanding of the intended purpose and function of the MEWP controls, including platform, ground, and emergency descent controls.
3. Control labels, instructions, and warnings on the machine.
4. Applicable regulations, standards, and safety rules.
5. Use of approved fall protection equipment.
6. Enough knowledge of the mechanical operation of the machine to recognize a malfunction or potential malfunction.
7. The safest means to operate the machine where overhead obstructions, other moving equipment, and obstacles, depressions, holes, and drop-offs exist.
8. Means to avoid the hazards of unprotected electrical conductors.
9. Selection of the appropriate MEWP and available options for the work to be performed considering specific job requirements, with involvement from the MEWP owner, user, and/ or supervisor.
10. The responsibility of the operator to ensure all platform occupants have a basic level of knowledge to work safely on the MEWP, and to inform them of applicable regulations, standards, and safety rules.
11. The requirement for familiarization in addition to training.

2.1.2 Training Supervision

Training must be delivered by a qualified person in an open area free of hazards until the trainee has demonstrated the ability to safely control and operate the machine.

2.1.3 Operator Responsibility

The operator must be instructed that they have the responsibility and authority to shut down the machine in case of a malfunction or other unsafe condition of either the machine or the job site.

2.1.4 Machine Familiarization

Note: Responsibilities for familiarization may vary by region.

Only properly trained personnel who have received unit-specific familiarization shall operate a MEWP. The user shall determine if personnel are qualified to operate the MEWP prior to operation. The user shall ensure that after familiarization, the operator operates the MEWP for a sufficient period of time to achieve proficiency. When authorized by the user, self-familiarization can be achieved, if authorized, by a properly trained operator reading, understanding and following the manufacturer's operator's manual.

Prior to user's authorization of an operator to use a specific model of MEWP, the user shall ensure the operator is familiarized on the following:

1. Location of the manual storage compartment and the requirement to ensure the required manual(s) are present on the MEWP;
2. Purpose and function of the machine controls and indicators at the platform and ground control stations;
3. Purpose, location, and function of the emergency controls;
4. Operating characteristics and limitations;
5. Features and devices;
6. Accessories and optional equipment.

2.2 PREPARATION, INSPECTION, AND MAINTENANCE

The following table covers machine inspections and maintenance required by JLG Industries, Inc. Consult local regulations for further requirements for MEWPs. The frequency of inspections and maintenance must be increased as necessary when the machine is used in a harsh or hostile environment, if the machine is used with increased frequency, or if the machine is used in a severe manner.


Table 3. Inspection and Maintenance Table

Type	Frequency	Primary Responsibility	Service Qualification	Reference
Pre-Start Inspection	Before using each day; or whenever there is an Operator change	User or Operator	User or Operator	Operation & Safety Manual
Pre-Delivery Inspection (See Note)	Before each sale, lease, or rental delivery	Owner, Dealer, or User	Qualified JLG Mechanic	Service & Maintenance Manual and applicable JLG inspection form
Frequent Inspection (See Note)	In service for 3 months or 150 hours, whichever comes first or Out of service for a period of more than 3 months or Purchased used	Owner, Dealer, or User	Qualified JLG Mechanic	Service & Maintenance Manual and applicable JLG inspection form
Annual Machine Inspection (See Note)	Annually, no later than 13 months from the date of prior inspection	Owner, Dealer, or User	Factory Trained Service Technician (Recommended)	Service & Maintenance Manual and applicable JLG inspection form
Preventive Maintenance	At intervals as specified in the Service & Maintenance Manual	Owner, Dealer, or User	Qualified JLG Mechanic	Service & Maintenance Manual
Note: Inspection forms are available from JLG. Use the Service & Maintenance Manual to perform inspections.				

NOTICE

JLG Industries, Inc. recognizes a factory trained service technician as a person who has successfully completed the JLG Service Training School for the specified JLG product model.

2.3 MACHINE COMPONENTS

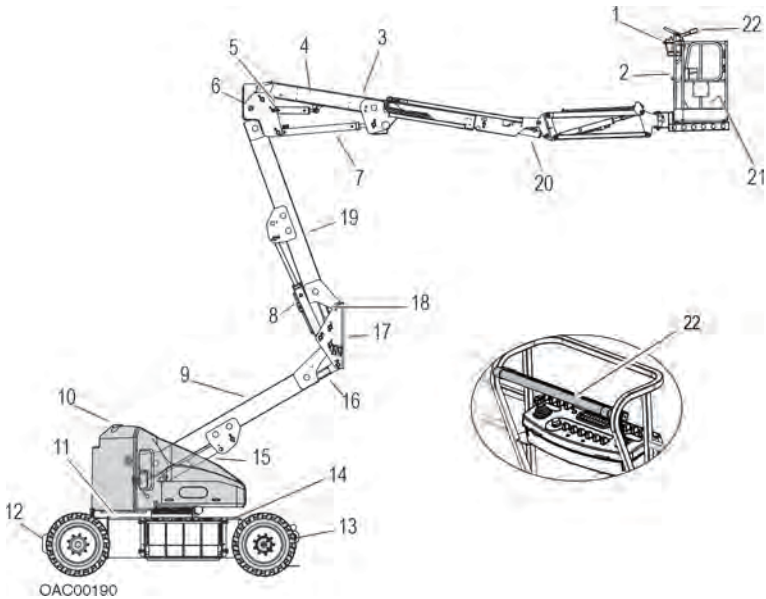

- | | | |
|--------------------------------|-------------------------|--------------------|
| 1. Platform Control Console | 9. Lower Boom | 17. Lower Upright |
| 2. Platform | 10. Turntable | 18. Upper Link |
| 3. Upper Boom | 11. Frame | 19. Mid Boom |
| 4. Telescope Cylinder (inside) | 12. Steer Wheels | 20. Slave Cylinder |
| 5. Master Cylinder | 13. Drive Wheels | 21. Footswitch |
| 6. Upper Upright | 14. Battery Box | 22. SkyGuard |
| 7. Upper Lift Cylinder | 15. Lower Lift Cylinder | |
| 8. Mid Lift Cylinder | 16. Lower Link | |

2.4 PRE-START INSPECTION

The Pre-Start Inspection should include each of the following:

1. **Cleanliness** — Check all surfaces for leakage (oil or battery fluid) or foreign objects. Report any leakage to the proper maintenance personnel.

2. **Structure** — Inspect the machine structure for dents, damage, weld or parent metal cracks or other discrepancies.

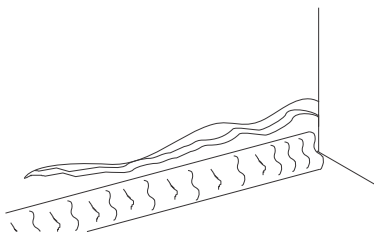


Figure 1. Parent Metal Crack

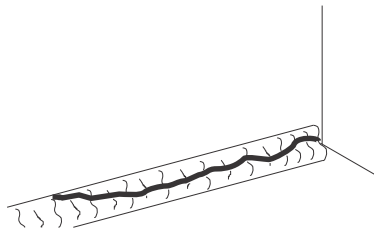



Figure 2. Weld Crack

3. **Decals and Placards** — Check all for cleanliness and legibility. Make sure none of the decals and placards are missing. Make sure all illegible decals and placards are cleaned or replaced.
4. **Operation and Safety Manuals** — Make sure a copy of the Operation and Safety Manual, AEM Safety Manual (ANSI markets only), and ANSI Manual of Responsibilities (ANSI markets only) is enclosed in the weather resistant storage container.
5. **Walk-Around Inspection** — Perform as instructed.
6. **Battery** — Charge as required.
7. **Hydraulic Oil** — Check the hydraulic oil level. Ensure hydraulic oil is added as required.
8. **Accessories/Attachments** — Refer to the Accessories section in this manual or accessory installed upon the machine for specific inspection, operation, and maintenance instructions.
9. **Function Check** — Once the Walk-Around Inspection is complete, perform a functional check of all systems in an area free of overhead and ground level obstructions. Refer to Section 4, Machine Operation for more specific instructions.
10. **Platform Gate** — Keep gate and surrounding area clean and unobstructed. Verify the gate closes properly and is not bent or damaged. Keep gate closed at all times except when entering/exiting the platform and loading/unloading materials.
11. **Lanyard Attach Points** — During operation, occupants in the platform must wear a full body harness with a lanyard attached to an authorized lanyard anchorage point. Attach only one (1) lanyard per lanyard anchorage point.

⚠ WARNING

If the machine does not operate properly, turn off the machine immediately! Report the problem to the proper maintenance personnel. Do not operate the machine until it is declared safe for operation.

2.5 WALK-AROUND INSPECTION

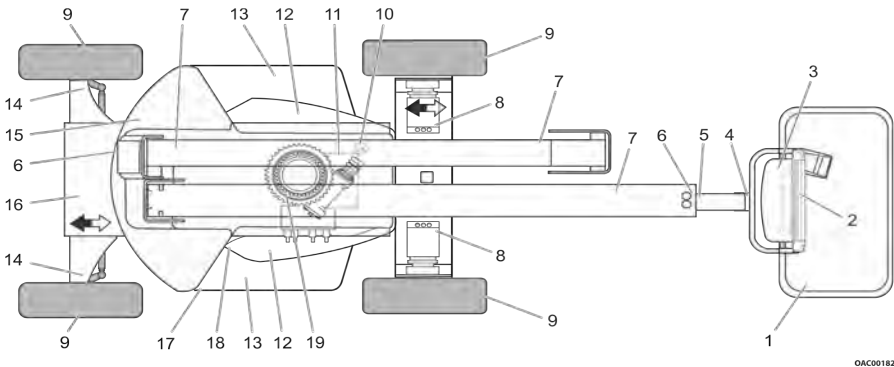

Begin the Walk-Around Inspection at Item 1, as noted on the diagram. Continue to the right (counterclockwise viewed from top) checking each item in sequence for the conditions listed in the Walk-Around Inspection Checklist.

⚠ WARNING

To avoid possible injury be sure machine power is off during Walk-Around Inspection.

NOTICE

Do not overlook visual inspection of chassis underside. Checking this area may result in discovery of conditions which could cause extensive machine damage.

INSPECTION NOTE: On all components, make sure there are no loose or missing parts, that they are securely fastened, and no visible damage, leaks or excessive wear exists in addition to any other criteria mentioned.

1. **Platform Assembly and Gate** - Footswitch works properly, not modified, disabled or blocked. Gate latches and hinges in working condition.
2. **SkyGuard** - See Inspection Note.
3. **Platform Control Console** - Switches and levers return to neutral when activated and released, decals/placards secure and legible, control markings legible.

4. **Platform Rotator** - See Inspection Note.
5. **Jib Assembly and Jib Rotator** - See Inspection Note.
6. **All Hydraulic Cylinders** - No visible damage; pivot pins and hydraulic hoses undamaged, not leaking.
7. **Boom Sections/Uprights/Turntable** - See Inspection Note.
8. **Drive Motor, Brake, and Hub** - No evidence of leakage.
9. **Wheel/Tire Assemblies** - Properly secured, no missing lug nuts. Inspect for worn tread, cuts, tears or other discrepancies. Inspect wheels for damage and corrosion.
10. **Swing Motor and Worm Gear** - No evidence of damage.
11. **Hydraulic Pump and Hydraulic Reservoir** - See Inspection Note.
12. **Hood Assemblies** - See Inspection Note.
13. **Battery Compartment** - Batteries have proper electrolyte level; cables tight; no visible damage or corrosion.
14. **Tie Rod Ends and Steering Spindles** - See Inspection Note.
15. **Counterweight** - See Inspection Note.
16. **Battery Charger** - See Inspection Note.
17. **Ground Control Console** - Switches and levers return to neutral when activated and released, decals/placards secure and legible, control markings legible.
18. **Manual Descent** - See Inspection Note.
19. **Turntable Bearing** - Evidence of proper lubrication. No evidence of loose bolts or looseness between bearing and machine.

2.6 FUNCTION CHECK

WARNING

To avoid serious injury, do not operate machine if any control levers or toggle switches controlling platform movements do not return to the off position when released.

WARNING

To avoid a collision and injury if platform does not stop when a control switch or lever is released, remove foot from footswitch or use emergency stop to stop machine.

Perform the Function Check as follows:

1. From the ground control console with no load in the platform:
 - a. Ensure that all machine functions are disabled when the Emergency Stop Button is pushed in.
 - b. Ensure all functions stop when the function switch is released.
 - c. Operate all functions and ensure proper operation;
 - d. Ensure proper operation of the manual descent controls, as described in [Section — Machine Operation](#) of this manual.
2. From the platform control console:
 - a. Ensure that the control console is firmly secured in the proper location
 - b. Check that all guards protecting the switches or locks are in place.
 - c. Ensure that all machine functions are disabled when the Emergency Stop Button is pushed in.
 - d. Ensure that all machine functions stop when the footswitch is released.
 - e. Operate all functions and ensure proper operation.
3. With the platform in the stowed position:
 - a. Drive the machine on a grade, not to exceed the rated gradeability, and stop to ensure the brakes hold;
 - b. Check that the tilt indicator is illuminated to ensure proper operation.
4. Swing the boom over either of the rear tires and ensure that the Drive Orientation indicator illuminates and that the Drive Orientation Override switch must be used for the drive function to operate.
5. With the machine positioned on a smooth, firm surface within the limits of the maximum operating slope, elevate the boom 10 degrees or greater above horizontal. Select high speed drive mode. Carefully attempt to drive and ensure the drive speed is reduced.

2.7 SKYGUARD® FUNCTION TEST

Note: Refer to [Section — SkyGuard Operation](#) for additional information on SkyGuard operation.

From the Platform Console in an area free from obstructions:

1. Operate the telescope out function.
2. Activate the SkyGuard sensor:
 - a. **SkyGuard** — Apply approximately 50 lb (222 Nm) of force to yellow bar.
 - b. **SkyGuard SkyLine®** — Press rod to break connection between the rod and the right bracket.
 - c. **SkyGuard SkyEye®** — Put arm or hand in path of sensor beam.
3. Once the sensor has been activated, verify the following conditions:
 - a. Telescope out function stops and telescope in function operates for a short duration.
 - b. The horn sounds.
 - c. If equipped with SkyGuard beacon, the beacon illuminates.

Note: If SkyGuard is enabled with the Soft Touch system, functions will cut out instead of reversing.

4. Disengage the SkyGuard sensor, release controls, then recycle the foot switch. Ensure normal operation is available.

Note: On machines equipped with SkyLine, reattach the rod to the right bracket.

If SkyGuard remains activated after function reversal or cutout, press and hold the SkyGuard Override Switch to allow normal use of machine functions until the sensor is disengaged.

This Page is intentionally left blank

SECTION 3

Machine Controls and Indicators

3.1 GENERAL

NOTICE

The manufacturer has no direct control over machine application and operation. The user and operator are responsible for conforming with good safety practices.

This section provides the necessary information needed to understand control functions.

3.2 CONTROLS AND INDICATORS

Note: The indicator panels use different shaped symbols to alert the operator to different types of operational situations that could arise. The meaning of those symbols are explained below.



Indicates a potentially hazardous situation, which if not corrected, could result in serious injury or death. This indicator will be red.




Indicates an abnormal operating condition, which if not corrected, may result in machine interruption or damage. This indicator will be yellow.



Indicates important information regarding the operating condition, i.e. procedures essential for safe operation. This indicator will be green with the exception of the capacity indicator which will be yellow.

3.3 GROUND CONTROL STATION

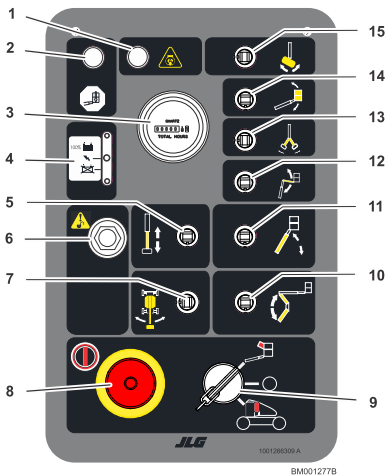

1. System Distress Indicator
2. Platform Overload Indicator
3. Hourmeter
4. Battery Charger Status
5. Telescope
6. Machine Safety System Override (MSSO) (If Equipped)
7. Swing
8. Power/Emergency Stop
9. Platform/Ground Select
10. Lower/Mid Lift
11. Upper Boom Lift
12. Jib
13. Jib Swing
14. Platform Leveling
15. Rotate

3.3.1 Ground Control Station Functions

! WARNING

To avoid serious injury, do not operate machine if any control levers or toggle switches controlling platform movement do not return to the off or neutral position when released.

Note: When machine is shut down the Platform/ Ground Select switch and Emergency Stop must be positioned to off.



Battery Charge Status

A single LED light indicates charge status of battery. Green indicates full charge (100%). Amber indicates charge cycle in process. Red indicates charger fault or abnormal battery condition.



Hourmeter

Registers the amount of time the machine has been in use with the engine running. By connecting into the oil pressure circuit of the engine, only engine hours are recorded. The hourmeter registers up to 9,999.9 hours and cannot be reset.



Jib

The Jib control switch provides raising and lowering of the jib.



Jib Swing (If Equipped)

The Jib Swing control switch provides swinging of the jib when positioned left or right.

Lower/Mid Boom Lift

Provides for raising and lowering of Lower Boom.



Machine Safety System Override (MSSO) (If Equipped)

Provides emergency override of function controls that are locked out in the event of Load Sense System activation.



Platform / Ground Select Switch

A three position, key operated switch supplies power to the platform control console when positioned to Platform. With the switch key in the Ground position, power is shut off to platform and only ground controls are operable.



Note: When Platform/Ground Select switch is in the center position, power is shut off to the controls at both operating stations.

Platform Leveling Override

A three position switch allows the operator to adjust the automatic self leveling system. This switch is used to adjust platform level in situations such as ascending/descending a grade.



⚠ WARNING

Only use the platform leveling override function for slight leveling of the platform. Incorrect use could cause the load/occupant to shift or fall. Failure to do so could result in death or serious injury.

Platform Overload

Indicates the platform has been overloaded.



Power / Emergency Stop Switch

A two-position red mushroom shaped switch furnishes power to Platform/Ground Select switch when pulled out (on). When pushed in (off), power is shut off to the Platform/Ground Select switch.



Rotate

A three position Rotate control switch permits rotation of the platform.



Swing

The Swing control switch provides 350 degrees non-continuous turntable rotation.



 
System Distress Indicator

The system distress indicator lights to signify an electrical system fault.



Telescope


Provides for extension and retraction of Upper Boom.

**Upper Boom Lift**

Provides for raising and lowering of Upper Boom.



3.4 PLATFORM CONTROL STATION

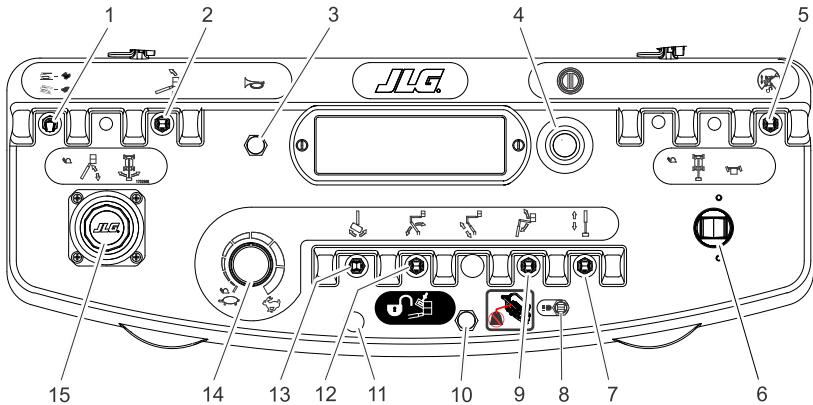

BM001315A

- | | | |
|-------------------------------|--|---|
| 1. Drive Speed/Torque Select | 6. Drive/Steer | 11. Soft Touch/SkySense/Sky-Guard Indicator |
| 2. Platform Leveling Override | 7. Telescope | 12. Lower Boom Lift |
| 3. Horn | 8. Lights | 13. Platform Rotate |
| 4. Power/Emergency Stop | 9. Jib | 14. Function Speed |
| 5. Drive Orientation Override | 10. Soft Touch/SkySense/Sky-Guard Override | 15. Main Lift/Swing |

3.4.1 Platform Control Station Functions

! WARNING

To avoid serious injury, do not operate machine if any control levers or toggle switches controlling platform movement do not return to the off or neutral position when released.

⚠ WARNING

Only use the platform leveling override function for slight leveling of the platform. Incorrect use could cause the load/occupants to shift or fall. Failure to do so could result in death or serious injury.

Drive Orientation Override

When the boom is swung over the rear tires or further in either direction, the Drive Orientation indicator will illuminate when the drive function is selected. Push and release the switch, and within 3 seconds move the Drive/Steer control to activate drive or steer. Before driving, locate the black/ white orientation arrows on both the chassis and the platform controls and match the control direction arrow to the intended direction of travel.



Note: To operate the Drive joystick, pull up on the locking ring below the handle.



Note: The Drive joystick is spring loaded and will automatically return to neutral (off) position when released.

Drive Speed / Torque Select

The machine has a two position switch — The forward position gives maximum drive speed. The back position gives maximum torque for rough terrain and climbing grades.



Drive / Steer

The Drive controller provides for driving either forward or backward when positioned to Forward or Reverse. The controller is 'ramped' to allow infinitely variable drive speed between fast and slow.



Positioning the steer control thumb operated switch Right or Left enables steering the machine to the right or left respectively.

Note: When lower boom is raised above horizontal, or the upper boom is raised approximately 16 inches (40.64 cm) above boom rest, the high drive function will automatically switch to low drive. This also occurs when Function Speed Control is clicked on creep.

⚠ WARNING

To avoid serious injury, do not operate machine if any control levers or toggle switches controlling platform movement do not return to the off or neutral position when released.

Function Speed Control

This control knob affects the speed of Lower Boom Lift, Jib Lift, Telescope, and Platform Rotate functions.



Note: During platform rotation, a speed difference may not be noticeable to the operator.

Turning the knob all the way counterclockwise until it clicks puts the machine into Creep Mode. Creep Mode puts the functions listed above, as well as Drive/Steer and Main Lift/Swing functions into the slowest speed setting.

Note: To operate the Main Boom Lift/Swing joystick, pull up on the locking ring below the handle.



Note: The Main Boom Lift/Swing joystick is spring loaded and will automatically return to neutral (Off) position when released.

Horn

A push-type Horn switch supplies electrical power to an audible warning device when pressed.



Jib

Provides for raising and lowering of the jib.



Lights (If Equipped)

This switch operates the accessory lights package if the machine is so equipped.



Lower Boom Lift

Provides for raising and lowering of Lower and Mid Boom.



Main Lift / Swing Controller

Provides main lift and swing. Push forward to lift up, pull backward to boom down. Move right to swing right, move left to swing left. Moving the joystick activates switches to provide the functions selected.



Note: Lower lift will not function when operating main lift.

Platform Level Override

A three position switch allows the operator to adjust the automatic self leveling system. This switch is used to adjust platform level in situations such as ascending/descending a grade.



Platform Rotate
Provides rotation of the platform.



Power / Emergency Stop
A two-position red mushroom shaped switch furnishes power to Platform Controls when pulled out (On). When pushed in (Off), power is shut off to the platform functions.



Soft Touch / SkyGuard / SkySense Indicator
Indicates the Soft Touch bumper is against an object or the SkyGuard sensor has been activated. All controls are cut out until the override button is pushed. For Soft Touch, controls are then active in the Creep Mode or for SkyGuard, controls will work normally. If machine is equipped with SkySense, the switch will mute the SkySense speakers.

Soft Touch / SkyGuard / SkySense Override
For machines equipped with SkyGuard:
The SkyGuard override switch enables functions cut out by the SkyGuard system to be operated again, allowing the operator to resume use of machine functions.



For machines equipped with both SkyGuard and Soft Touch:
The switch operates like the SkyGuard override switch as described above. The switch also enables the functions cut out by the Soft Touch system to operate again at creep speed, allowing the operator to move the platform away from the obstacle that caused the shutdown situation.



For machines equipped with both SkyGuard and SkySense:
The switch operates like the SkyGuard override switch as described above. The switch also enables the functions cut out by the SkySense system to operate again at creep speed, allowing the operator to move the platform closer to the obstacle that caused the shutdown situation if desired.



Telescope
Provides extension and retraction of the main boom.



Table 4. Simultaneous Functions

If This Function is Selected:	These Functions Will Also Work at the Same Time:				
Drive and Steer		Swing	Lower Lift**	Upper Lift**	Telescope
Swing	Drive and Steer		Lower Lift**	Upper Lift**	Telescope
Lower Lift	Drive and Steer	Swing*		No	Telescope*
Upper Lift	Drive and Steer	Swing	No		Telescope
Telescope	Drive and Steer	Swing*	Lower Lift**	Upper Lift**	


Table 4. Simultaneous Functions (continued)

If This Function is Selected:	These Functions Will Also Work at the Same Time:				
Jib	Drive and Steer	Swing*	Lower Lift**	Upper Lift**	Telescope
Platform Rotate	Drive and Steer	No	No	No	No
Note: Boom functions may be slower when selected with another function than when operated individually, due to sharing of oil.					

Table 4. Simultaneous Functions (continued)

If This Function is Selected:	These Functions Will Also Work at the Same Time:
* These functions may move very slowly (or not at all) if the first function selected (Lower Lift or Swing) is being operated at full speed, due to sharing of oil.	
** Lower Lift and Upper Lift will not function simultaneously. Upper Lift always prevails.	

3.5 PLATFORM CONTROL INDICATOR PANEL

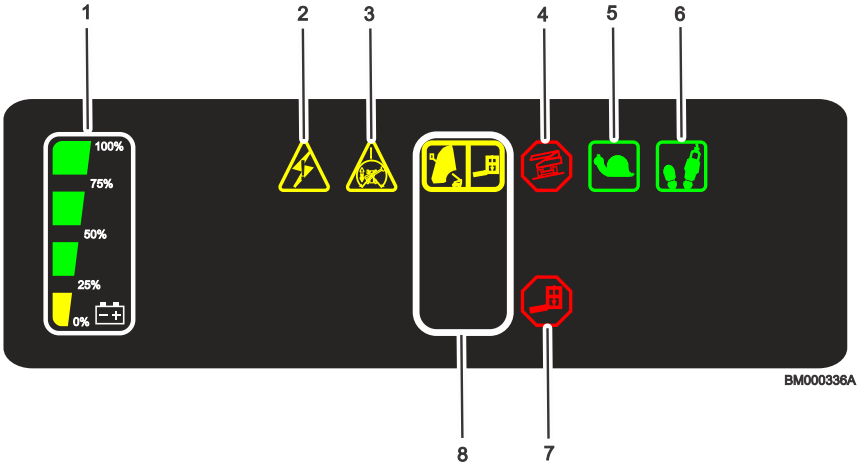

1. Battery Charge Level

2. System Distress

3. Drive Orientation

4. Capacity Zone Indicator
5. Tilt Alarm / Warning

6. Creep Speed

 
7. Footswitch

8. Overload

3.5.1 Platform Control Indicator Panel Functions

Battery Charge Level

Indicates the state-of-charge of the battery pack.



Capacity Zone Indicator

Indicates the maximum platform capacity zone for the current position of the platform. Restricted capacities are permitted at restricted platform positions (shorter boom lengths and higher boom angles).



Creep Speed

When the Function Speed Control is turned to the creep position, the indicator acts as a reminder that all functions are set to the slowest speed.



Drive Orientation

When the boom is swung beyond the rear drive tires or further in either direction, the Drive Orientation indicator will illuminate when the drive function is selected. This is a signal for the operator to verify that the drive control is being operated in the proper direction (i.e., controls reversed situations).



Footswitch Enable

To operate any function, the footswitch must be pressed down and the function selected within seven seconds. The enable indicator shows that the controls are enabled. If a function is not selected within seven seconds, or if a seven second lapse between ending one function and beginning the next function, the enable light will go out and the footswitch must be released and pressed again to enable the controls.



Releasing the footswitch removes power from all controls and stops all functions.

! WARNING

To avoid serious injury, do not remove, modify, or disable the footswitch by blocking or any other means.

Platform Overload

Indicates the platform has been overloaded.



System Distress

The light indicates that the JLG Control System has detected an abnormal condition and a Diagnostic Trouble Code has been set in the system memory. Refer to the Service Manual for instructions concerning the trouble codes and trouble code retrieval.



Tilt Warning Light and Alarm

This red illuminator indicates that the chassis is on a slope. If the boom is above horizontal and the machine is on a slope, the tilt alarm warning light will illuminate, an alarm will sound, available functions are placed in Creep speed, and drive is cut out in direction of travel. Drive in the opposite direction may be allowed under certain conditions.




Tilt Angle	Market
3°	All Markets

! WARNING

If tilt warning light is illuminated when boom is raised or extended, retract and lower to below horizontal then reposition machine so that it is within the limits of the maximum operating slope before extending boom or raising boom above horizontal.

3.6 BATTERY CHARGER

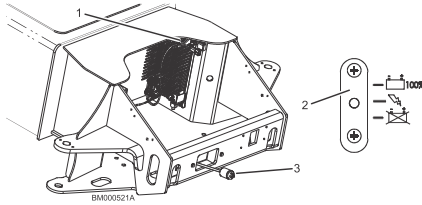

1. LED Indicator Panel on Charger (Under Hood)
2. LED Indicator on Ground Control Station
3. AC Input Plug (Rear of Machine)

Note: Some components removed for clarity.


1. LED Indicator on Charger

- **AC Power On:** Blue LED on
- **Low State of Charge:** Bottom Panel — Green LED flashing; Top Panel — Green LED off
- **High State of Charge:** Bottom Panel — Green LED on; Top Panel — Green LED flashing
- **Charge Complete:** Bottom Panel — Green LED on; Top Panel — Green LED on
- **Fault Indicator:** Red LED on
- **External Error Condition Caution:** Amber LED flashing

2. LED Indicator on Ground Control Station

- **Full Charge (100%):** LED is green
- **Charge Cycle in Process:** LED is amber
- **Abnormal Battery Condition/Charger Fault:** LED is red

3.6.1 Optional Charger

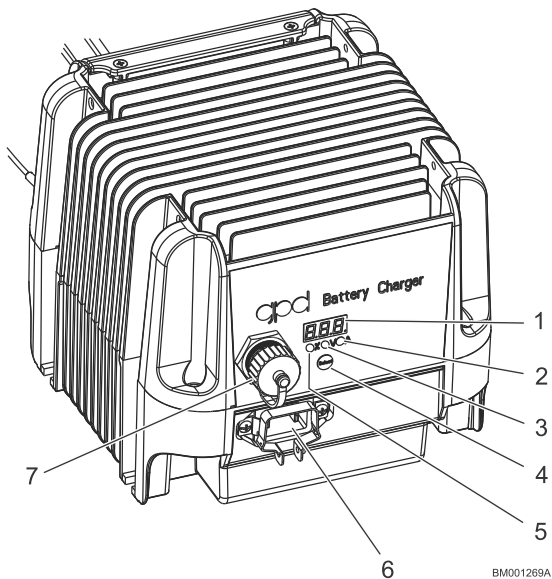

- 1. **Display**
- 2. **Charging Current** — The display will indicate the charging current
- 3. **Charging Voltage** — The display will indicate the charging voltage
- 4. **Options Button** — Pressing the button cycles through Curve State/Start EQ/ Check Battery Voltage
- 5. **Charging Capacity** — The display will indicate the charging capacity
- 6. **AC Input Plug**
- 7. **USB Port** — Used to update firmware, change curve, download charging data

LED Indicator

LED Color and State	Function
Solid green	Electric quantity – 100%
Fast flashing green	Electric quantity – 75% to 99%
Fast flashing amber	Electric quantity – 50% to 75%
Slow flashing amber	Electric quantity – less than 50%
Flashing red	Error
Solid red	Communication Outage

SECTION 4

Machine Operation

4.1 GENERAL

This machine is a mobile elevating work platform used to position personnel, along with their necessary tools and materials at work locations.

The primary operator control station is in the platform. From this control station, the operator can drive and steer the machine in both forward and reverse directions. The operator can raise or lower the boom or swing the boom to the left or right. Standard boom swing is 350° non-continuous. The machine has a Ground Control Station which will override the Platform Control Station. Ground Controls operate all functions except drive and steer. Except for performing inspections and the Function Check, the ground controls are to be used in an emergency to lower the platform to the ground should the operator in the platform be unable to do so.

4.2 OPERATING CHARACTERISTICS AND LIMITATIONS

4.2.1 Operating Conditions

The boom can be raised above horizontal with or without any load in platform, if:

1. Machine is positioned on a smooth, firm surface within the limits of the maximum operating slope.
2. Load is within manufacturer's rated capacity.
3. All machine systems are functioning properly.
4. Machine is as originally equipped from JLG.

4.2.2 Platform Load Sensing System (LSS)

The Platform Load Sensing System (LSS) measures platform load from a sensor in the platform support.


If the LSS senses an overload condition, the overload alarm will sound, the overload indicator will light up at both the platform control and the ground control stations, and all boom functions will be disabled. To regain boom control, reduce the load in the platform to not exceed the rated workload indicated on the capacity decal. If unable to resolve the overload condition, auxiliary power may be used to return the platform to a safe working condition. See Emergency Operation section.

4.3 STABILITY

Machine stability is based on two (2) positions which are called Forward and Backward stability. The machines position of least Forward stability is shown in [Figure — Position of Least Forward Stability, page 50](#), and its position of least Backward stability is shown in [Figure — Position of Least Backward Stability, page 50](#).


⚠ WARNING

To avoid forward or backward tipping, do not overload machine or operate the machine on an out-of-level surface.

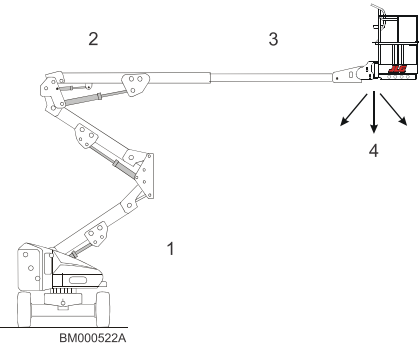

1. Tower and mid boom at 33°.
2. Upper boom horizontal.
3. Fly boom fully extended.
4. Machine will tip over in this direction if overloaded or operated beyond the limits of the maximum operating slope.

Figure 3. Position of Least Forward Stability

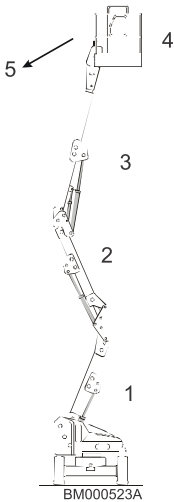

1. Lower boom fully elevated.
2. Mid boom full elevated.
3. Upper boom fully elevated and retracted.
4. Platform rotated 90°.
5. Machine will tip over in this direction if overloaded or operated beyond the limits of the maximum operating slope.

Figure 4. Position of Least Backward Stability

4.4 MOTOR OPERATION

4.4.1 Power/Emergency Stop

The Power/Emergency Stop switch, when pulled out (on), provides battery power for all machine functions. The switch should be pushed in (off) when recharging the batteries or parking the machine overnight.

Within about 2 seconds of pulling the switch out, the machine will perform a diagnostic check of the various electrical circuits, and if everything is OK, the platform alarm will beep once. During this time the lights on the indicator panel will also blink once as a bulb check.




4.4.2 Platform/Ground Select Switch

The Platform/Ground Select switch directs battery power to the desired control station when the Power/Emergency Stop switch is pulled out (on).

With the switch held in the Ground position battery power is supplied to the ground control station.

When the switch is in the Platform position, battery power is supplied to the platform control station.

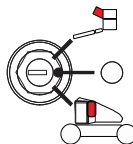

4.4.3 Motor Activation

NOTICE

Footswitch must be depressed prior to activating any function, otherwise function will not operate.

The motor becomes activated and operates the desired function when the Emergency Stop switch is pulled out (on), the Platform/ Ground select switch is in the appropriate position and the Footswitch is depressed.

⚠ CAUTION

If a motor malfunction necessitates unscheduled shutdown, determine and correct cause before resuming any operation.

4.5 TRAVELING (DRIVING)

Note: For units equipped with optional tilt cutout, verify that the drive function is cut out when the boom is elevated and tilt alarm is activated.

Note: When lower boom is raised above horizontal, or the upper boom is raised approximately 16 inches (40.6 cm) above boom rest, the high drive function will automatically be in low drive.

NOTICE

If the machine is operated at a very slow speed or stalled when climbing a grade of 20% or greater, drive function will stop. Remove foot from footswitch, and depress footswitch to reset.

⚠ WARNING


Do not drive with boom above horizontal except on a smooth, firm surface within the limits of the maximum operating slope.

To avoid loss of travel control or tip over on grades and side slopes, do not drive machine on grades exceeding those specified in the operating specifications section of this manual.

Do not drive on side slopes which exceed 3 degrees.


Use extreme caution when driving in reverse and at all times when driving with platform elevated.

Before driving, locate the black/white orientation arrows on both the chassis and the platform controls. Move the drive controls in a direction matching the directional arrows for the intended direction of travel.

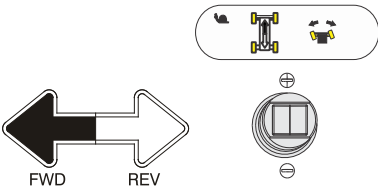


4.5.1 Traveling Forward and Reverse

1. At Platform Controls, pull out Emergency Stop switch, start engine, and activate footswitch.
2. Position Drive controller to forward or reverse as desired.

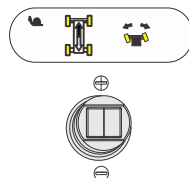

This machine is equipped with a Drive Orientation Indicator. The yellow light on the platform control console indicates that the boom is swung beyond the rear drive tires and the machine may Drive/Steer in the opposite direction from the movement of the controls. If the indicator is illuminated, operate the Drive function in the following manner:

 1. Match the black and white direction arrows on both platform control panel and the chassis to determine the direction the machine will travel.
2. Push and release the Drive Orientation Override switch. Within 3 seconds, slowly move the Drive control toward the arrow matching the intended direction of machine travel. The indicator light will flash during the 3 second interval until the drive function is selected.



4.6 TRAVELING (GRADE/SIDE SLOPE)

Note: Refer to the Operating Specifications table for gradeability and side slope ratings.

All ratings for gradeability and side slope are based upon the machine's boom being in the stowed position, fully lowered, and retracted.

Traveling is limited by two factors:

1. Gradeability, which is the percent of grade of the incline the machine can climb.
2. Side slope, which is the angle of the slope the machine can be driven across.

4.6.1 Traveling on a Grade

When traveling a grade, maximum braking and traction are obtained with the boom stowed, in position over the rear (drive) axle, and in line with the direction of travel. Drive the machine forward when climbing a grade, and in reverse when descending a grade. Do not exceed the machine's maximum rated gradeability.

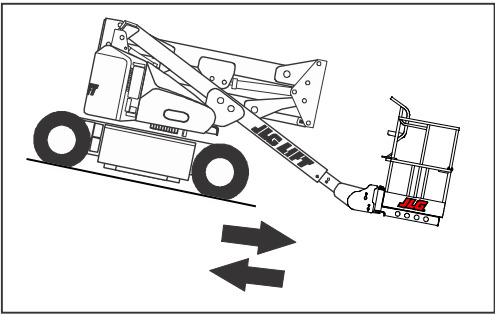


Figure 5. Traveling on a Grade

NOTICE

If the boom is over the front (steer) axle, direction of steer and drive movement will be opposite from the movement of the controls.

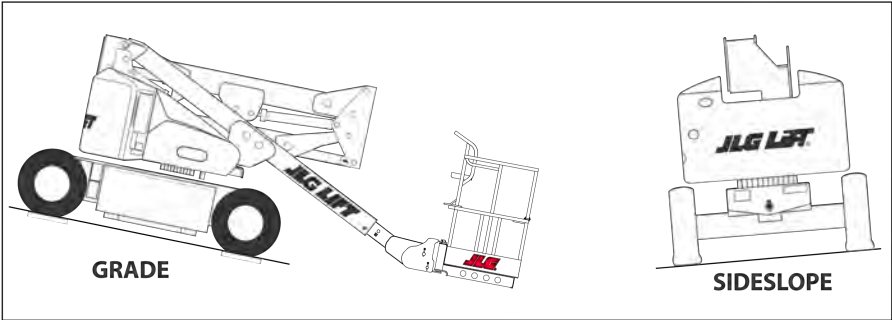


Figure 6. Grade and Side Slope

4.7 STEERING

Press footswitch. Position thumb switch on Drive/Steer controller to Right for steering right, or to Left for steering left.



4.8 PLATFORM

JLG offers multiple platform sizes to accommodate a variety of applications. Refer to the Illustrated Parts Manual for available platforms.

Not all platform options may be of adequate size to allow for the maximum number of rated occupants shown on the machine's capacity decal. The number of platform occupants may never exceed the number of available lanyard anchorage points. Attach only one (1) lanyard per lanyard anchorage point.

4.8.1 Loading From Ground Level

1. Position chassis on a smooth, firm and level surface.
2. If total load (personnel, tools and supplies) is 500 lb (227 kg for ANSI markets and 230 kg for CE and Australia markets) or less, distribute load uniformly on platform floor and proceed to work position.

4.8.2 Loading From Positions Above Ground Level

Before loading weight to platform above ground level:

 
1. Determine what the total weight will be after additional weight is loaded (personnel, tools and supplies).
2. If total weight in platform will be 500 lb (227 kg for ANSI markets and 230 kg for CE and Australia markets) or less, proceed with adding weight.

4.8.3 Platform Level Adjustment

! WARNING

Only use the platform leveling override function for slight leveling of the platform. Incorrect use could cause the load/occupants to shift or fall. Failure to do so could result in death or serious injury.

During normal operation of the machine, the platform will automatically maintain its position. To manually level up or down, position the platform/level control switch up or down and hold until the platform is level.




4.8.4 Platform Rotation

To rotate the platform to the left or right, use the platform rotate control switch to select the direction and hold until the desired position is reached.



4.8.5 Jib Swing

 To rotate jib and platform to the left, jib swing control switch is positioned to the left and held until desired position is reached.



4.9 BOOM

WARNING

A red tilt warning light is located on the platform control indicator panel which lights when the chassis is on an excessive slope. Do not swing or raise boom above horizontal when indicator is lit.

Do not depend on the tilt warning light as a level indicator for the chassis. Tilt alarm indicates chassis is on an excessive slope (3 degrees or greater). Chassis must be positioned within the allowable operating slope before swinging or raising boom above horizontal or driving with the boom elevated.

To avoid tip over if red tilt warning light lights when the boom is raised above horizontal, lower platform to ground level. Then reposition machine so that chassis is within the allowable operating slope before raising boom.

If the platform does not stop when a control switch or lever is released, remove foot from footswitch or use emergency stop switch to stop the machine.

To avoid serious injury, do not operate machinery if any control lever or toggle switch controlling platform movement does not return to the 'off' or neutral position when released.

CAUTION

To avoid a collision and injury if platform does not stop when a control switch or lever is released, remove foot from footswitch or use emergency stop switch to stop the machine.

4.9.1 Swinging the Boom

To swing boom, use Swing control to select Right or Left direction.




NOTICE

When swinging the boom make sure there is ample room for the boom to clear surrounding walls, partitions and equipment.


4.9.2 Raising and Lowering the Lower and Mid Boom

To raise or lower the Lower and Mid Boom, with footswitch activated, position Lower Boom Lift switch to UP or DOWN as desired.

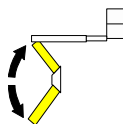

4.9.3 Raising and Lowering the Upper Boom

 To raise or lower the Upper Boom, use the Upper Boom Lift switch to select UP or DOWN until desired height is reached.



4.10 BATTERY CHARGING

Note: Park the machine in a well-ventilated area before charging.

1. Connect the charger AC input plug to a grounded outlet using a 3 wire heavy duty extension cord.
2. The charge cycle is complete when the single LED light on the ground control panel turns green. Additionally, the green LEDs on the top and bottom panels of the battery charger illuminate.

! CAUTION

Only plug the charger into a properly installed and grounded outlet. Do not use ground adapters or modify plug in any way. Do not touch non-insulated portion of output connector or non-insulated battery terminal.

Do not operate charger if the AC supply cord is damaged, or if the charger has received a sharp blow, been dropped, or otherwise damaged in any way.

Always disconnect the charger AC supply before making or breaking the positive/negative connections to the battery.

Do not open or disassemble charger.

4.11 INVERTER

The inverter converts 48 VDC to 110 VAC to allow operation of power tools from the machine's batteries.

- The inverter is operational when the emergency stop switch is pulled out.

- The machine and inverter can be operated at the same time.
- The inverter will shut off at approximately 42 VDC and stay off until the emergency stop switch is recycled. It will operate again until voltage drops to 42 VDC.
- The machine will operate down to 36 VDC.
- The inverter will shut down if the high temperature light indicated overheating. It will automatically turn back on when cooled.
- The overload light indicates an output wiring short circuit or a load that is too large for the rating of the inverter.

4.12 FUNCTION SPEED CONTROL

This control affects the speed of Telescope, Tower Boom Lift, Jib Lift, and Platform Rotate functions.


Note: During platform rotation, a speed difference may not be noticeable to the operator.



Turning the knob all the way counterclockwise until it clicks puts the machine into Creep Mode. Creep Mode puts the functions listed above, as well as the Drive/Steer and Main Lift/Swing functions into the slowest speed setting.

4.13 USB CHARGING PORT

The machine is equipped with a USB charging port for the operator.

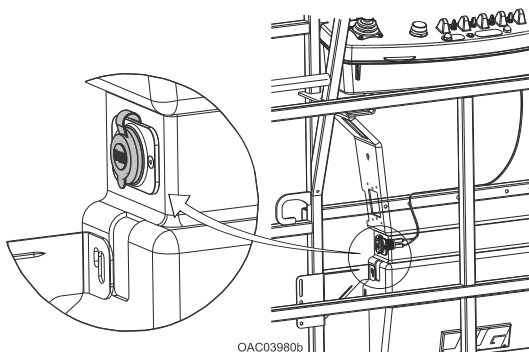

4.14 MACHINE SAFETY SYSTEM OVERRIDE (MSSO) (IF EQUIPPED)

The Machine Safety System Override (MSSO) is used to override function controls for Emergency Platform Retrieval only. Refer to Emergency Procedures Section for Machine Safety System Override operating procedures (if equipped).



4.15 SKYGUARD OPERATION


SkyGuard provides enhanced control panel protection. When the SkyGuard sensor is activated, functions in use at the time of actuation will reverse or cutout. The SkyGuard Function Table provides more details on these functions.

During activation, the horn will sound and the SkyGuard beacon (if equipped) will illuminate until sensor and footswitch are disengaged.

If the SkyGuard sensor remains activated after function reversal or cutout, press and hold the SkyGuard Override Switch to allow normal functions until the sensor is disengaged.


Consult the following illustrations to determine which type of SkyGuard the machine has and how it is activated. Regardless of type, SkyGuard function according to the SkyGuard Function Table does not change.

4.15.1 SkyGuard

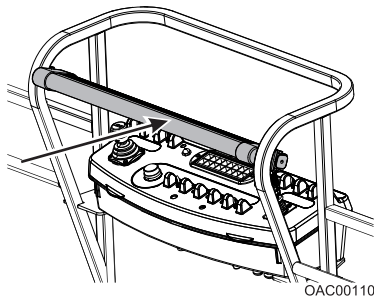

Approximately 50 lb (222 Nm) of force is applied to yellow bar.


4.15.2 SkyGuard - SkyLine

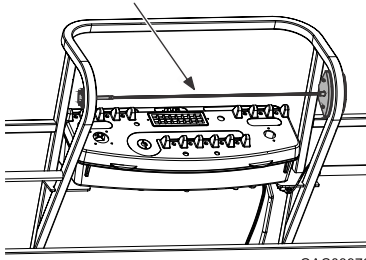

OAC03970

Rod is pressed, breaking the connection between the rod and right bracket.

4.15.3 SkyGuard - SkyEye

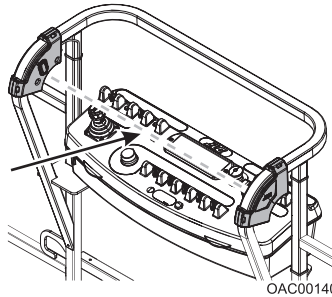

OAC00140

Operator passes through path of sensor beam.

4.15.4 SkyGuard Function Table

Drive Forward	Drive Reverse	Steer	Swinging	Tower Lift Up	Tower Tele Out	Tower Lift Down	Tower Tele In	Boom Lift Up	Boom Lift Down	Boom Tele Out	Boom Tele In	Jib Lift	Basket Level	Basket Rotate
R* / C**	R	C	R	R	C	C	C	R	R	R	C	C	C	C
R = Indicates Reversal is Activated														
C = Indicates Cutout is Activated														
* DOS (Drive Orientation System) Enabled														
** DOS Not Enabled, machine is driving straight without steering, and any other hydraulic function is active														
Note: If SkyGuard is enabled with the Soft Touch system, functions will cut out instead of reversing.														

4.16 BOOM SYNCHRONIZING PROCEDURE

Note: If the Lower Boom assembly does not fully lower:

1. Remove all personnel from the platform.
2. Pull the red knob located beside the main control valve.
3. From Ground Control, activate the lift control switch, raise Lower Boom 1.8 m (6 ft).
4. After raising Lower Boom, release the red knob.
5. Activate Lower Boom Down, fully lower boom.
6. Repeat step 1 through 5 if necessary.

4.17 SHUT DOWN AND PARK

Note: When parking battery powered units overnight, batteries should be charged properly to ensure readiness for following workday.

Note: Electric machines are equipped with a static strap due to static electricity build-ups. Strap is located under rear of machine chassis.

The preferred procedures to shut down and park the machine are as follows:

1. Drive machine to a reasonably well protected area.
2. Ensure boom is fully retracted and lowered over rear axle.
3. Shut down Emergency Stop at Platform Controls.
4. Shut down Emergency Stop at Ground Controls. Position Platform/Ground Select switch to center Off.
5. If necessary, cover Platform Controls to protect instruction placards, warning decals and operating controls from hostile environment.

NOTICE

If parking a MEWP with the boom elevated in an effort to conserve space, booms may be elevated, but shall not be extended. It is the operator's responsibility to ensure all safety precautions in section 1 of this manual are followed for each unique situation.

4.18 LIFTING AND TIE DOWN

4.18.1 Lifting

1. Refer to the Machine Serial Number Plate, call JLG Industries, or weigh the individual unit to find out the Gross Vehicle Weight.
2. Place the boom in the stowed position.
3. Remove all loose items from the machine.
4. Properly adjust the rigging to prevent damage to the machine and so the machine remains level.


4.18.2 Tie Down

NOTICE


When transporting the machine, the boom must be fully lowered into the boom rest.

1. Place the boom in the stowed position.
2. Remove all loose items from the machine.
3. Secure the chassis using straps or chains of adequate strength.
4. Ensure the platform is lowered so the wear pad on the bottom rests on the surface of the transportation vehicle.

Note: Secure through the tie downs on the boom using straps or chains of adequate strength.

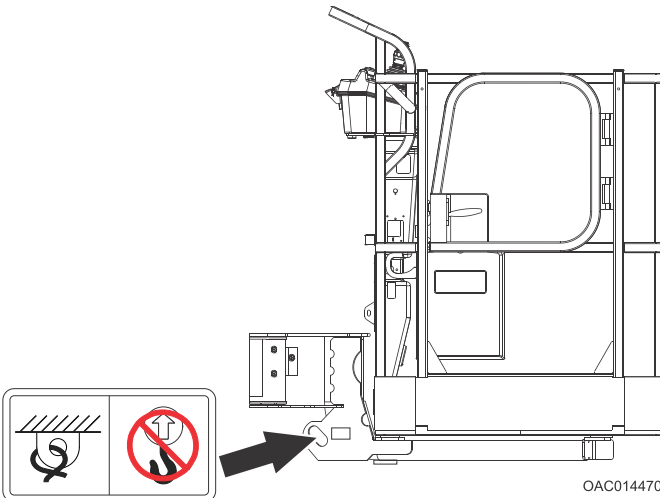

4.19 LIFTING CHART

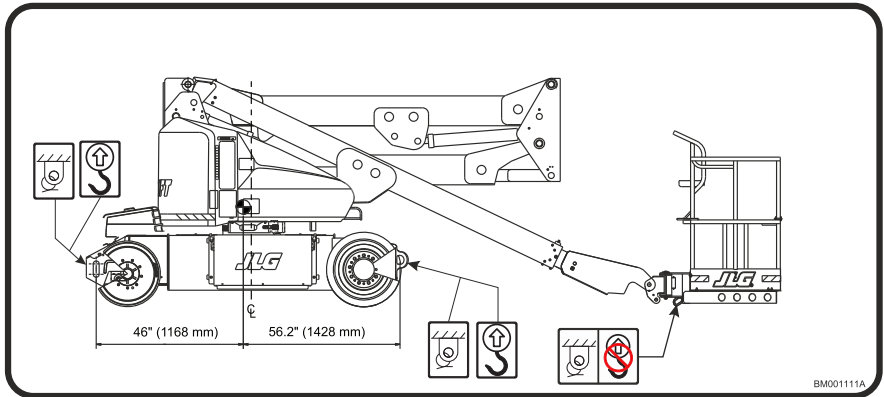

4.20 E450AJ SAFETY DECALS

4.20.1 Safety Decals Location and Legend

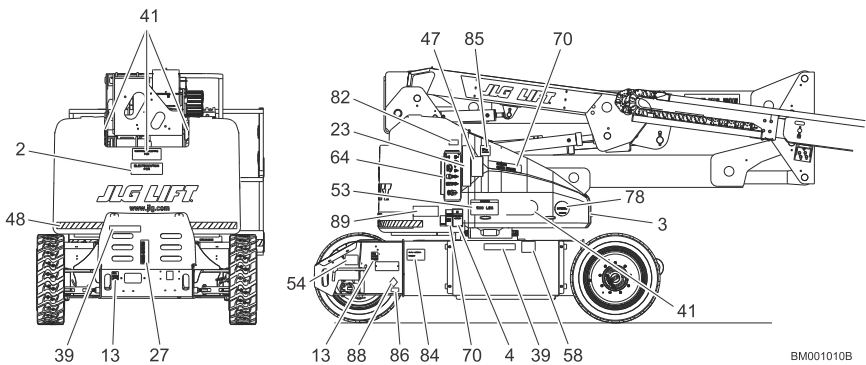


Figure 7. Safety Decals - 1 of 6

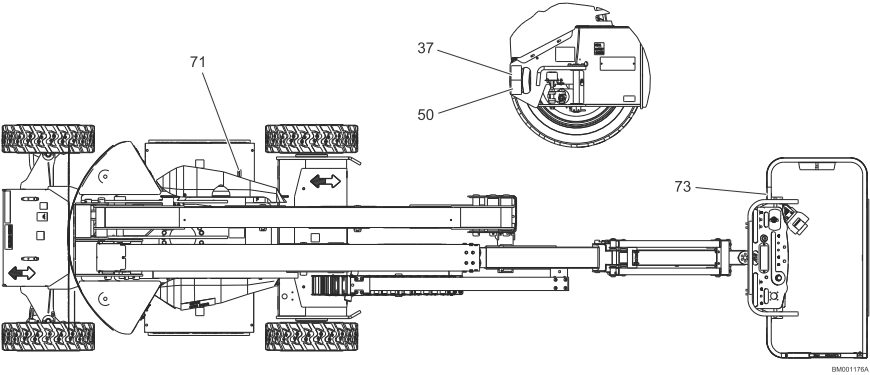


Figure 8. Safety Decals - 2 of 6

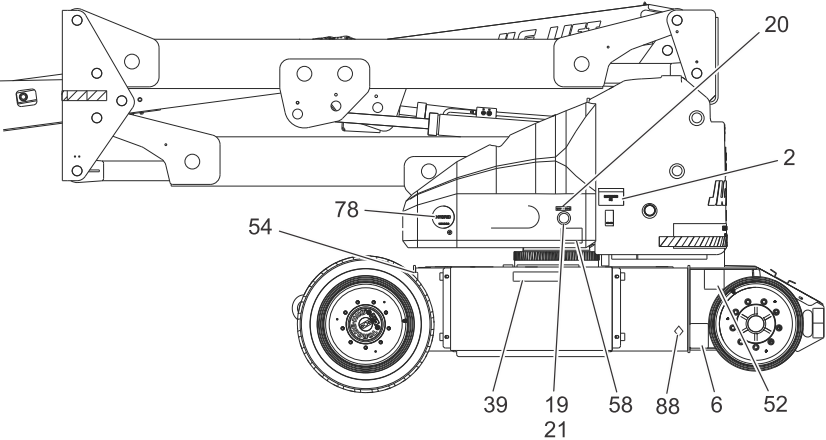


Figure 9. Safety Decals - 3 of 6

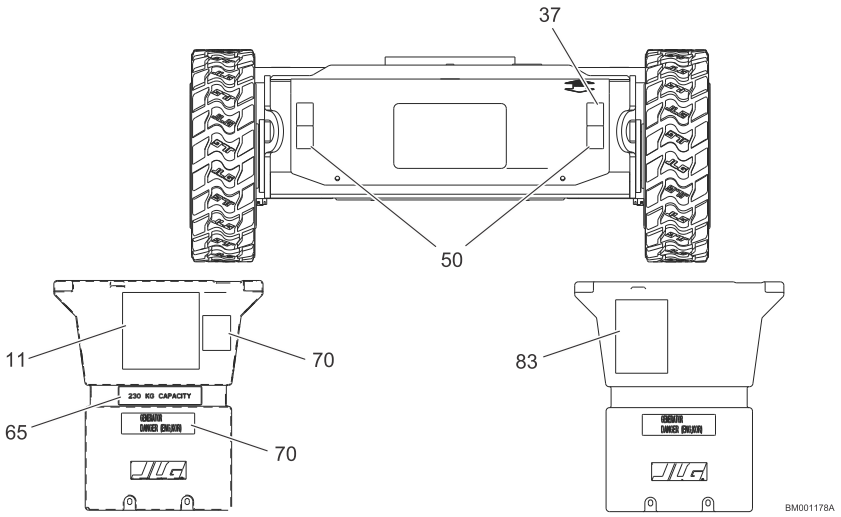


Figure 10. Safety Decals - 4 of 6

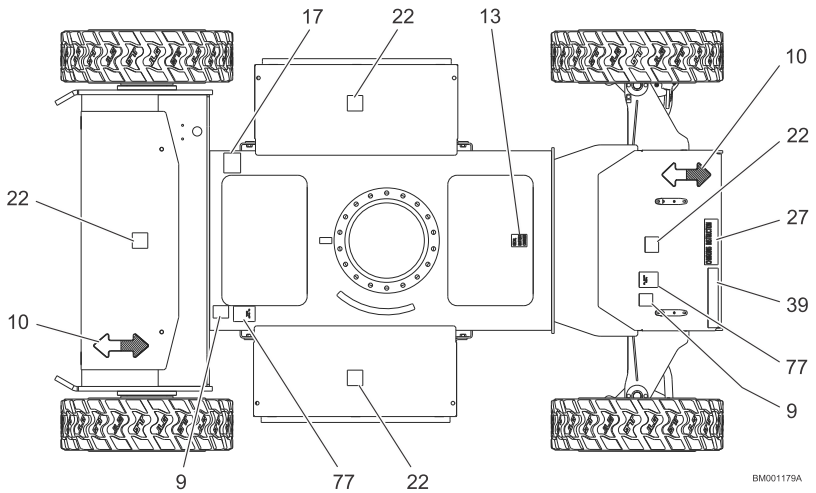


Figure 11. Safety Decals - 5 of 6

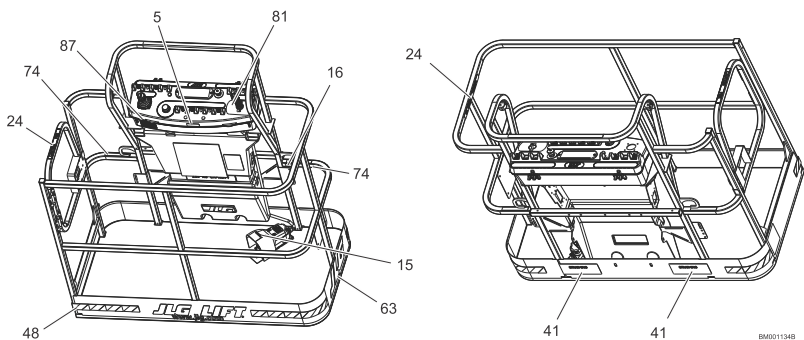


Figure 12. Safety Decals - 6 of 6

Table 5. E450AJ Decal Legend

Item #	ANSI	Australian	Japanese	Korean	Spanish	French	Chinese	Portuguese	CE
2	1703805	--	1703938	1703939	1703935	1703936	1703937	1703940	--
3	1001272055	1001272055	1001272055	1001272055	1001272055	1001272055	1001272055	1001272055	1001272055
4	1703798	1705822	1703932	1703933	1703929	1703930	1703931	1703934	1705822
6	1001131269	--	--	--	--	1700584	--	--	--
7	1001253997	1001253996	1001253997	1001253997	1001253997	1001253997	1001253997	1001253997	1001253993
9	1701504	1701504	1701504	1701504	1701504	1701504	1701504	1701504	1701504
10	1701642	1701642	1701642	1701642	1701642	1701642	1701642	1701642	1701642
11	1703797	1705921	1703926	1703927	1703923	1703924	1703925	1703928	1705921
13	1701644	1701644	1701644	1701644	1701644	1701644	1701644	1701644	1701644
15	--	1705828	1703980	1703981	1703983	1703984	1703982	1703985	1705828
16	1704277	1704277	1704277	1704277	1704277	1704277	1704277	1704277	1704277
20	3251243	--	--	--	3251243	3251243	--	3251243	--
22	1701691	1701691	1701691	1701691	1701691	1701691	1701691	1701691	1701691
23	1001104864	1001104864	1001104864	1001104864	1001104864	1001104864	1001104864	1001104864	1001104864
24	1702868	--	--	--	1704001	1704000	--	1704002	--
25	1001193949	1001193949	1001193949	1001193949	1001193949	1001193949	1001193949	1001193949	--
27	1704446	1706378	1704417	1704418	1704454	1704452	1704419	1704453	1706378
37	1701500	1703811	1701500	1701500	1701500	1701500	1701500	1701500	1703811

Table 5. E450AJ Decal Legend (continued)

Item #	ANSI	Australian	Japanese	Korean	Spanish	French	Chinese	Portuguese	CE
39	1703813	1705670	1704342	1704343	1704339	1704340	1704344	1704341	1705670
40	3252347	--	--	--	--	--	--	--	--
41	1703804	1701518	1703950	1703951	1703947	1703948	1703949	1703952	1701518
47	1702265	1705977	1702271	1702265	1702265	1702265	1703988	1703991	1705977
48	0259550	0259550	0259550	0259550	0259550	0259550	0259550	0259550	0259550
50	1702300	1703814	1702300	1702300	1702300	1702300	1702300	1702300	1703814
52	1702631	1702631	1702631	1702631	1702631	1702631	1702631	1702631	1702631
53	1001253921	1705978	100125933	1001253925	1001253931	1001253923	1001253927	1001253929	1705978
54	1704445	1704445	1704445	1704445	1704445	1704445	1704445	1704445	1704445
65	1001253920	1705978	1001253932	1001253924	1001253930	1001253922	1001253926	1001253928	1705978
77	1704412	1704412	1704412	1704412	1704412	1704412	1704412	1704412	1704412
81	1705351	--	1705426	1705427	1705910	1705429	1705430	1001113680	--
82	--	1001189882	--	--	--	--	--	--	1001189882
84	1001223055	--	1001224053	1001224048	1001224049	1001223971	1001224050	1001224052	--
85	1001222801	1001222801	1001222801	1001222801	1001222801	1001222801	1001222801	1001222801	1001222801
86	1001228370	--	--	--	--	1001228370	--	--	--
87	1001231801	--	--	--	--	--	--	--	--
89	1001285735	1001285735	1001285735	1001285735	1001285735	1001285735	1001285735	1001285735	1001285735

SECTION 5

Emergency Procedures

5.1 GENERAL

This section explains the steps to be taken in case of an emergency situation during operation.

5.2 INCIDENT NOTIFICATION

JLG Industries, Inc. must be notified immediately of any incident involving a JLG product. Even if no injury or property damage is evident, the factory should be contacted by telephone and provided with all necessary details.

- USA: 877-JLG-SAFE (554-7233)
- EUROPE: (32) 0 89 84 82 20
- AUSTRALIA: (61) 2 65 811111
- E-mail: ProductSafety@JLG.com

Failure to notify the manufacturer of an incident involving a JLG Industries product within 48 hours of such an occurrence may void any warranty consideration on that particular machine.

NOTICE

Following any incident, thoroughly inspect the machine and test all functions first from the ground controls, then from the platform controls. Do not lift above 3 m (10 ft.) until you are sure that all damage has been repaired, if required, and that all controls are operating correctly.

5.3 EMERGENCY OPERATION

5.3.1 Operator Unable to Control Machine

If the platform operator is pinned, trapped or unable to operate or control machine, do the following:

1. Other personnel should operate the machine from ground controls only as required.
2. Other qualified personnel on the platform may use the platform controls.

WARNING

Do not continue operation if controls do not function properly.

3. Cranes, forklift trucks or other equipment can be used to remove platform occupants and stabilize motion of the machine.

5.3.2 Platform or Boom Caught Overhead

If the platform or boom becomes jammed or snagged in overhead structures or equipment, do the following:

1. Shut off the machine.
2. Rescue all people in the platform before freeing the machine. Personnel must be out of the platform before operating any controls on the machine.
3. Use cranes, forklifts, or other equipment to stabilize motion of the machine to prevent a tip over as required.
4. From the ground controls, use the Auxiliary Power System (if equipped) to carefully free the platform or boom from the object.
5. Once clear, restart the machine and return the platform to a safe position.
6. Inspect the machine for damage. If the machine is damaged or does not operate properly, turn off the machine immediately. Report the problem to the proper maintenance personnel. Do not operate the machine until it is declared safe for operation.

5.4 EMERGENCY TOWING PROCEDURES

Towing this machine is prohibited, unless properly equipped. However, provisions for moving the machine, in case of a malfunction or power failure, have been incorporated. The following procedures are to be used **ONLY** for emergency movement to a suitable maintenance area.

1. Chock wheels securely.
2. Disengage drive hubs by reversing disconnect caps.

3. Connect suitable equipment, remove chocks, and move machine.

After moving machine, complete the following procedures:

1. Position machine on a firm and level surface.
2. Chock wheels securely.
3. Engage drive hubs by reversing disconnect caps on hubs.
4. Remove chocks from wheels as needed.

5.5 MANUAL DESCENT SYSTEM

The manual descent system is used, in the event of total power failure, to lower the upper and lower booms using gravity. To operate the manual descent system, proceed as follows:

1. Locate manual descent knob on main valve and turn clockwise. Install handle into manual descent pump and lower the Mid and Lower Booms by pumping the handle until they are completely lowered.
2. Turn manual descent knob counterclockwise and lower the Upper (or main) Boom by pumping the handle until it is completely lowered. Return manual descent knob to center position and stow handle in bracket provided.

5.6 MANUAL SWING OVERRIDE

The manual swing override is used to manually swing the boom and turntable assembly in the event of a total power failure when the platform is positioned over a structure or obstacle. To operate the manual swing override, proceed as follows:

1. Using a 7/8 inch socket and ratchet wrench, locate nut on swing worm gear on left side of machine.
2. Install wrench on nut and ratchet in the direction desired.

5.7 MACHINE SAFETY SYSTEM OVERRIDE (MSSO) (IF EQUIPPED)

The Machine Safety System Override (MSSO) is only to be used to retrieve an operator that is pinned, trapped, or unable to operate the machine. The MSSO will override function controls that are locked out from the platform and ground consoles. An example of this would be in the case of Load Sense System activation.



Note: If the MSSO functionality is used, a fault indicator is set with a fault code in the JLG Control System which must be reset by a qualified JLG Service Technician.

Note: No functional checks of the MSSO system are necessary. The JLG Control System will set a Diagnostic Trouble Code if the control switch is faulty.

Note: If the engine is not running, MSSO will function through the Auxiliary Power system.

To operate the MSSO, perform the following:

1. From the Ground Control Console, place the Platform/Ground Select switch into the Ground position.
2. Pull out the Power/Emergency Stop control switch.
3. Start the engine.
4. Press and hold the MSSO switch and the control switch for the desired function.

SECTION 6

Accessories

6.1 AVAILABLE ACCESSORIES AND RELATIONSHIP TABLE

Table 6. Available Accessories Table

Accessory	Market								
	ANSI (USA Only)	ANSI	AUS	CE/ UKCA	CSA	GB (Chi- na)	EAC	MOL 70	UL
Bolt-On External Fall Arrest (30" x 48") (30" x 60")	✓	✓	✓		✓	✓	✓	✓	✓
Fabric Mesh to Mid Rail (30" x 48") (30" x 60")	✓	✓	✓						
Fabric Mesh to Top Rail (30" x 48")	✓				✓		✓		✓
Fall Arrest Platform (30" x 60") (36" x 72")	✓	✓			✓				✓
Pipe Racks	✓	✓	✓	✓	✓	✓	✓	✓	✓
Platform Mesh to Mid Rail (30" x 48") (30" x 60")	✓	✓	✓						
Platform Mesh to Top Rail (30" x 48")	✓				✓		✓		✓
Platform Top Rail Extension (30" x 48") (30" x 60")	✓	✓	✓	✓	✓	✓	✓	✓	✓
Platform Work Lights	✓	✓	✓	✓	✓	✓		✓	✓

Table 6. Available Accessories Table (continued)

Accessory	Market								
	ANSI (USA Only)	ANSI	AUS	CE/ UKCA	CSA	GB (Chi- na)	EAC	MOL 70	UL
Platform Work Surface	√	√	√	√	√	√	√	√	√
SkySense®	√	√	√	√	√	√	√	√	√
SkySense® Platform Bumper Padding	√	√	√	√	√	√	√	√	√
Soft Touch (30" x 60")	√	√	√	√	√	√	√	√	

Table 7. Accessories/Options Relationship Table

Accessory	Required Item	Compatible With (Note 1)	Incompatible With	Interchangeable With (Note 2)
Nite Bright			Platform/Fabric MMR*, Platform/Fabric MTR**, Platform Work Lights, Top Rail Extension	
Pipe Racks		SkyPower	Platform/Fabric MMR*, Platform/Fabric MTR**, SkySense, SkySense Platform Bumper Padding, Soft Touch	
Platform Work Surface			Platform Fall Arrest, Platform/Fabric MMR*, Platform/Fabric MTR**, Soft Touch	
SkyAir	SkyPower	SkyCutter, SkyGlazier, SkyWelder		
SkyCutter	SkyPower	SkyWelder	4 ft Platform, Pipe Racks, Platform/Fabric MMR*, Platform/Fabric MTR**, SkySense, SkySense Platform Bumper Padding, Soft Touch	SkyGlazier
SkyGlazier		SkyPower	4 ft Platform, Pipe Racks, Platform/Fabric MMR*, Platform/Fabric MTR**, SkySense, SkySense Platform Bumper Padding, Soft Touch, Top Rail Extension	SkyCutter, SkyWelder
SkyPower		Nite Bright, SkyCutter, SkyGlazier, SkyWelder	SkySense, SkySense Platform Bumper Padding	
SkySense			Pipe Racks, Platform MMR*, Platform MTR**, SkyGlazier, SkyPower, SkyWelder, Soft Touch, Top Rail Extension	
SkySense Platform Bumper Padding		SkySense	Nite Bright, SkyWelder, Soft Touch, Storage Tray, Top Rail Extensions, Sky Glazier, Sky Cutter, Platform Work Surface	
SkyWelder	SkyPower	Nite Bright, SkyCutter	4 ft Platform, Pipe Racks, Platform/Fabric MMR*, Platform/Fabric MTR**, Soft Touch	SkyGlazier

Table 7. Accessories/Options Relationship Table (continued)

Accessory	Required Item	Compatible With (Note 1)	Incompatible With	Interchangeable With (Note 2)
Soft Touch		SkyPower	Pipe Racks, SkyCutter, SkyGlazier, SkySense, SkySense Platform Bumper Padding, SkyWelder	
Note: 1. Any non - "Sky" accessory not listed under "Incompatible With" is assumed to be compatible.				
Note: 2. Can be used on the same unit but not simultaneously.				
* MMR = Mesh to Mid Rail; ** MTR = Mesh to Top Rail				

6.2 BOLT-ON EXTERNAL FALL ARREST

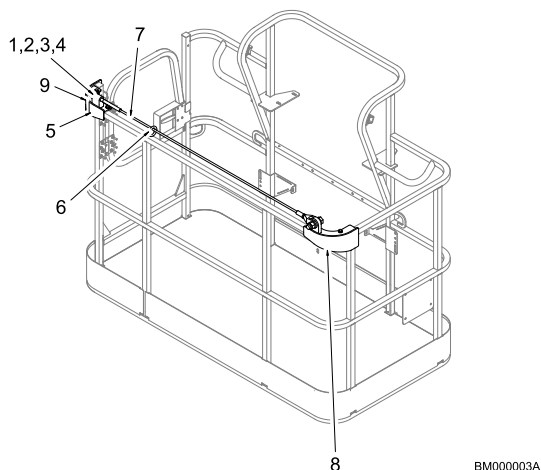


Figure 13. Bolt-On External Fall Arrest System

- 1. Belleville Washer
- 2. Washer
- 3. Hex Nut

- 4. Jam Nut
- 5. LH Bracket
- 6. Attachment Ring

- 7. Cable
- 8. RH Bracket
- 9. Decal

The bolt-on external fall arrest system is designed to provide a lanyard attach point while allowing the operator to access areas outside the platform. Exit/Enter the platform through the gate area only. The system is designed for use by one person.

Personnel must use fall protection at all times. A full body harness is required with lanyard not to exceed 6 ft (1.8 m) in length, that limits the maximum arrest force to 900 lb (408 kg).

External Fall Arrest System capacity is 310 lb (140 kg) - one (1) person maximum.

Do not move platform during use of the external fall arrest system.

! WARNING

Do not operate any machine functions while outside of platform. Be careful when entering/exiting the platform at elevation.

! WARNING

If the external fall arrest system is used to arrest a fall or is otherwise damaged, the entire system must be replaced and the platform fully inspected before returning to service. Refer to the service manual for removal and installation procedures.

NOTICE

The external fall arrest system requires an annual inspection and certification. The annual inspection and certification must be performed by a qualified person other than the user.

6.2.1 Inspection Before Use

The external fall arrest system must be inspected before each use of the machine. Replace components if there are any signs of wear or damage.

Before each use, perform a visual inspection of the following components:

- Cable: Inspect cable for proper tension, broken strands, kinks, or any signs of corrosion.

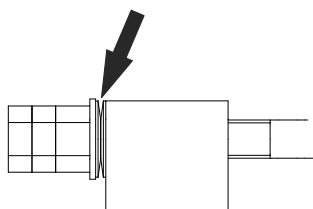


Figure 14. Incorrect Gap

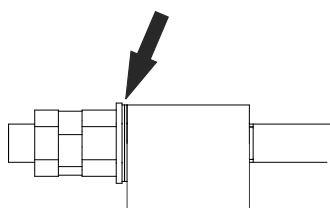


Figure 15. Correct Gap

Note: There should be no visible gap between the two Belleville washers when setting proper cable tension. If any gap is shown between the two Belleville washers, the cable tension is incorrect.

- Fittings & Brackets: Ensure all fittings are tight and there are no signs of fractures. Inspect brackets for any damage.
- Attachment Ring: No cracks or signs of wear are acceptable. Any signs of corrosion requires replacement.
- Attaching Hardware: Inspect all attaching hardware to ensure there are no missing components and hardware is properly tightened.
- Platform Rails: No visible damage is acceptable.

6.3 FALL ARREST PLATFORM

Note: See the JLG External Fall Arrest System manual (PN 3128935) for more detailed information.

The external fall arrest system is designed to provide a lanyard attach point while allowing the operator to access areas outside the platform. Exit/enter the platform through the gate area only. The system is designed for use by one person.


Personnel must use fall protection at all times. A full body harness is required with lanyard not to exceed 6 ft (1.8 m) in length, that limits the maximum arrest force to 900 lb (408 kg) for the transfastener type and 1350 lb (612 kg) for the shuttle type fall arrest system.

6.3.1 Safety Precautions

⚠ WARNING

Do not operate any machine functions while outside the platform. Use caution when entering/exiting the platform at elevation.

6.4 PIPE RACKS

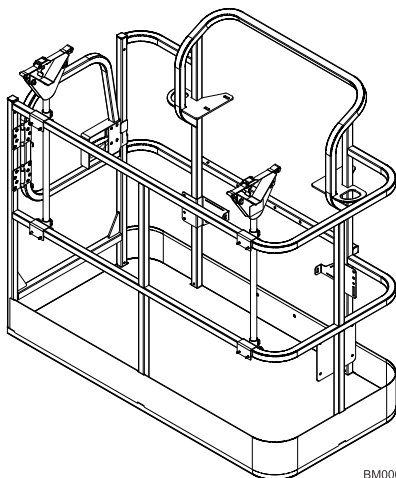

BM000004A

Figure 16. Pipe Racks

Pipe Racks provide a way to store pipe or conduit inside the platform in order to prevent rail damage and optimize platform utility. This accessory consists of two racks with adjustable straps to secure the load in place.

6.4.1 Capacity Specifications (Australia Only)

Max. Capacity in Racks	Max. Platform Capacity (With Max. Weight in Racks)
80 kg	184 kg
Max. Length of Material in Racks: 6.0 m Min. Length of Material in Racks: 2.4 m	

6.4.2 Safety Precautions

 WARNING

Reduce platform capacity by 100 lb (45.5 kg) when installed.

 WARNING

Weight in racks plus weight in platform must not exceed rated capacity.

NOTICE

The maximum load in the racks is 180 lb (80 kg) evenly distributed between the two racks.

NOTICE

The maximum length of material in racks is 20 ft (6.1 m).

- Ensure no personnel are beneath the platform.
- Do not exit platform over rails or stand on rails.
- Do not drive machine without material secured.
- Return racks to the stowed position when not in use.
- Use this option only on approved models.

6.4.3 Preparation and Inspection


- Ensure racks are secured to the platform rails.
- Replace torn or frayed tie-down straps.

6.4.4 Operation

1. To prepare racks for loading, remove locking pins, rotate each rack 90 degrees from stowed to working position, then secure with locking pins.
2. Loosen and remove tie-down straps. Place material on racks with weight evenly distributed between both racks.
3. Route the tie-down straps at each end across loaded material and tighten.
4. To remove material, loosen and remove tie-down straps, then carefully remove material from racks.

Note: Reinstall tie-down straps across any remaining material before continuing machine operations.

6.5 PLATFORM WORK LIGHTS

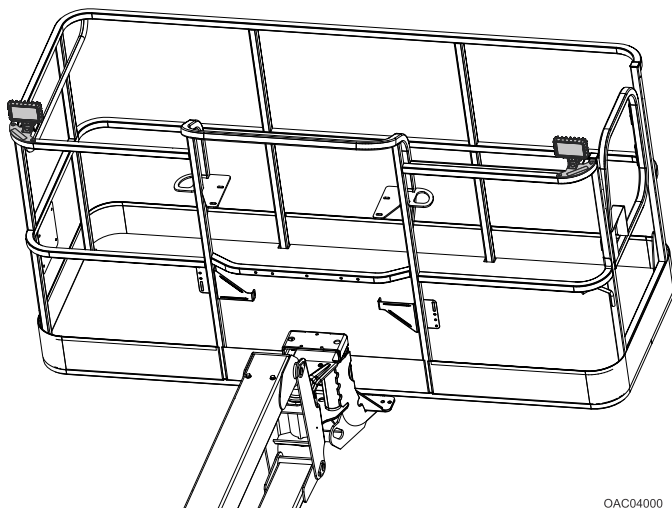


OAC04000

Figure 17. Platform Work Lights

The Platform Work Lights accessory consists of two 12V lights mounted to the platform railing.

6.6 PLATFORM WORK SURFACE

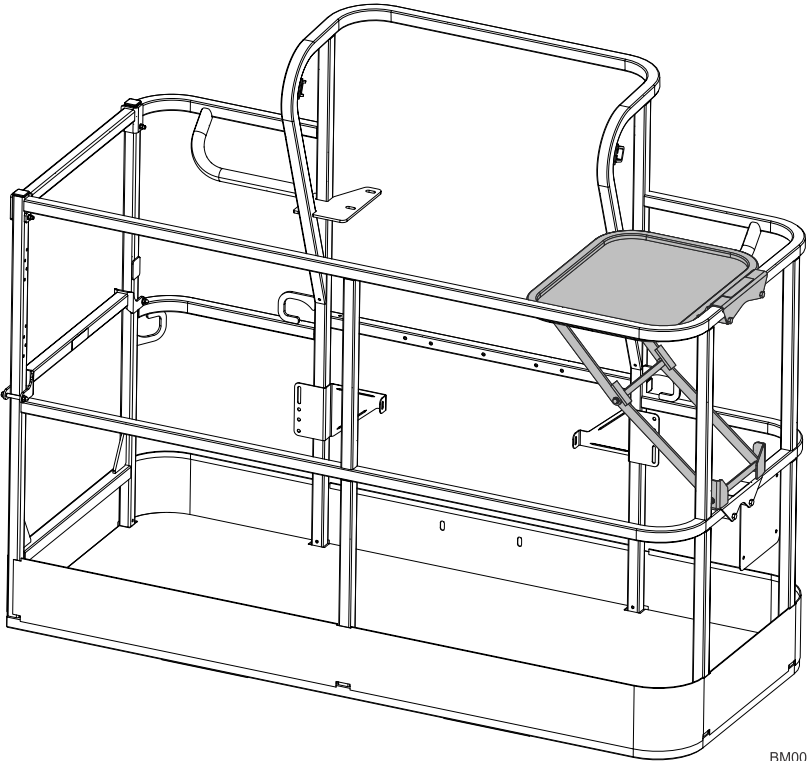

BM000276

Figure 18. Platform Work Surface

The platform work surface option consists of a corner tray bolted onto the top and mid rails of the platform.

6.7 SKYSENSE®

WARNING

SkySense is not intended to replace or reduce the need for the operator to be aware of the environment around the machine. Hazards that will cause serious injury or death may not be prevented or reduced by SkySense. The operator must always look in the direction of travel, avoid power lines, avoid obstacles that could strike the machine or persons in the platform, and follow all instructions, decals, and other warnings provided with this machine.

The operator must not rely on SkySense as a substitute for following the instructions and warnings contained in the manuals and placards provided with this machine.

SkySense is intended to assist the operator. SkySense may not detect certain objects depending on shape, type of material, or orientation of the object to the sensors. It is the operator's responsibility to be aware of their surroundings at all times.

WARNING

De-rate the platform by 10 lb (4.5 kg) per bar when installed on the platform (20 lb (9 kg) or 30 lb (14 kg) total).

Note: SkySense is not active when operating the machine from the ground controls.

6.7.1 Preparation and Inspection

Pre-Operation Inspection:

1. Inspect each of the SkySense tubes for dents, cracks, or other damage.
2. Inspect each SkySense sensor for any damage to the housing or sensor.

To test the SkySense system:

1. In an area free of obstructions, ensure the machine is on a smooth, firm surface within the limits of the maximum operating slope.
2. From the platform control console, elevate the boom until the bottom of the platform is at least 6 feet off the ground.
3. Continue to elevate the platform.
4. While elevating, hold your hand 6 inches to 12 inches above one of the upward facing sensors. The machine should stop, and the LED corresponding to that sensor (left LED for left sensor bar; right LED for right sensor bar; both LEDs for center sensor bar or overhead sensor) should be red.
5. Recycle the footswitch and press the override button on the platform control console.

6. Ensure the area below the platform is clear of obstructions and lower the platform. The machine should slow down, (SkySense Status LED will blink yellow with increasing frequency) and stop, (SkySense Status LED will be illuminated solid red) when the bottom of the platform is approximately 12 inches from the ground. The alarm should sound if it is not muted (refer to SkySense Alarm).
7. Recycle the footswitch and press the override button on the platform control console.
8. Continue to lower the platform. The machine should move in the elevated drive speed mode (SkySense Status LED will remain red).

Note: The SkySense system will not stop machine operation while in Creep.

6.7.2 Operation

SkySense slows a machine's function to creep speed when it is a certain distance away from an object, known as the "warning zone." If the machine continues to approach the object and moves into the "stop zone," SkySense stops all machine functions.

For proportional functions activated by the joystick, the size of the warning zone varies based on the amount of joystick activation. The stop zone always activates at the same distance from the object regardless of the joystick's position.

If the function has reached the warning zone, normal drive speed will resume when a function is activated in the opposite direction. If the machine has reached the SkySense stop zone, release the function and recycle the footswitch to activate a function in the opposite direction.

SkySense is active during the following functions:

- Lift Up/Down (including jib functions)
- Platform Rotate (including jib rotate)
- Telescope Out
- Swing
- Reverse Drive


Note: During active DOS (Drive Orientation System), SkySense is active when driving in both forward and reverse directions.

There are two LED indicators on the platform control box that signal SkySense activity.

- **No LED:** Normal operation.
- **LED Flashing Yellow:** Machine is in SkySense warning zone and will reduce function speed to creep. Flash frequency correlates to proximity of object.
- **LED Red:** Machine is in SkySense stop zone and all machine functions will cease.

- **LED Flashing Red:** SkySense sensor is obstructed or damaged. Obstructions must be removed and proper function verified. Damaged sensors must be replaced.

6.7.3 SkySense Platform Panel Indicators

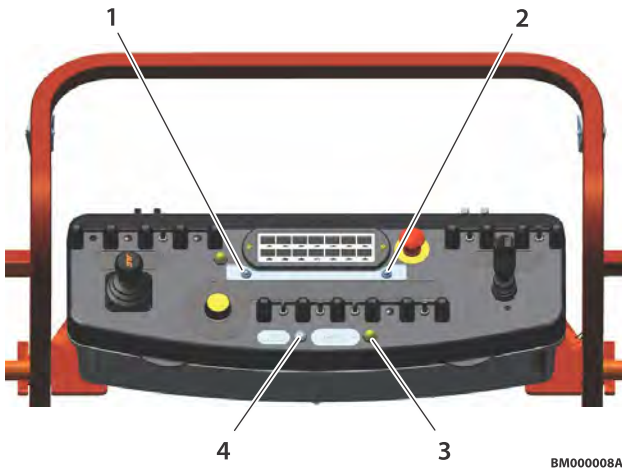

1. LED Indicator Light

2. LED Indicator Light

3. Override Button

4. Mute Speaker Button

6.7.4 SkySense Alarm

Activation of SkySense is signaled by an audible alarm and the LEDs on the platform console that indicate SkySense activity when reaching the warning or stop zones.

In the warning zone, the audible alarm will pulse and increase in frequency as the machine moves closer to the object. In the stop zone, the alarm will sound a continuous tone.

Additionally, when the machine is in the stop zone, the platform control panel audible alarm will sound. The system may be reset by recycling the footswitch.

The audible SkySense alarms can be muted by a button on the platform control console, although LEDs will continue to light. The platform control panel alarm will sound when the machine enters the SkySense stop zone even when muted.

6.7.5 SkySense Override Button

The yellow override button allows operators to bypass normal SkySense operation in order to move closer to an object in the stop zone.


When the operator overrides the SkySense via the override button to get closer to a work surface, the machine will maintain creep speed and flash the appropriate indicator color based on location in either the warning or stop zones.

Note: Override is only required to be engaged if the operator desires to move the platform closer to an object that is in or entering the stop zone.

NOTICE

SkyGuard operation is affected when SkySense is installed on a machine. If SkySense activation occurs prior to SkyGuard activation, SkyGuard will only cut out functions if activated. If SkyGuard activation occurs prior to SkySense activation, SkyGuard will function normally.

6.7.6 SkySense Coverage Areas

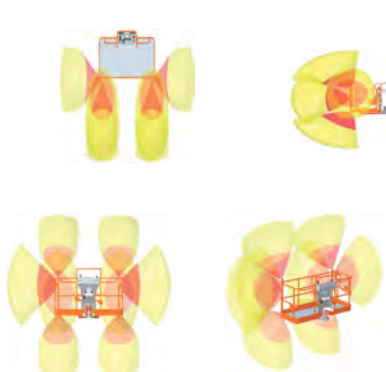

BM000009A

Figure 19. SkySense Coverage Level 1 Areas (2-Bar)




BM000010A

Figure 20. SkySense Coverage Level 2 Areas (3-Bar)

Note: Sensor Cones shown are approximations for reference only.

6.8 SKYSENSE® PLATFORM BUMPER PADDING

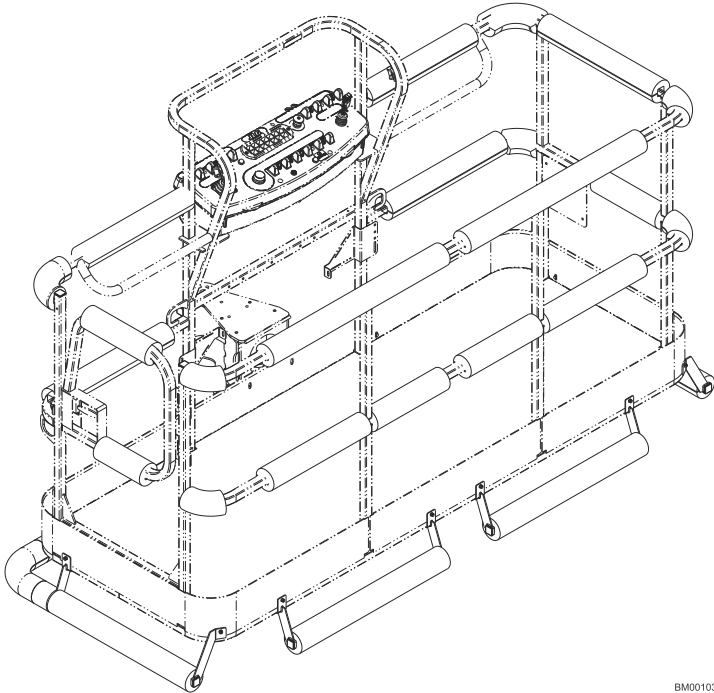

BM001038A

Figure 21. Platform Bumper Padding

This accessory outfits machines equipped with the SkySense accessory additional padding for the platform.

6.9 SOFT TOUCH

A padding kit is mounted to the platform rails and to a frame suspended below the platform. Limit switches deactivate platform functions when the padded framework contacts an adjacent structure. A button on the platform console allows override of the system.

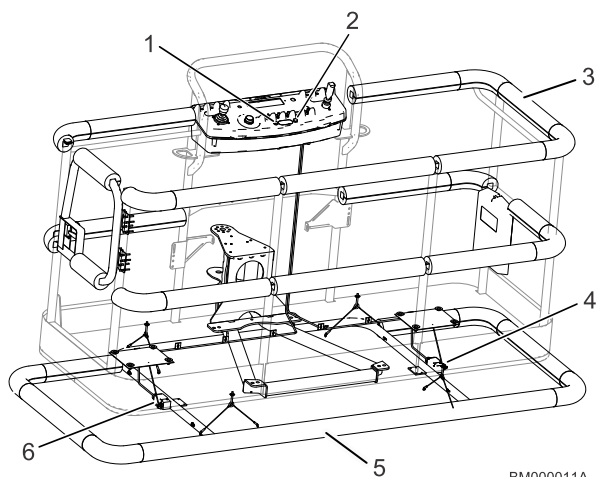


Figure 22. Soft Touch System

1. Override Indicator Light
2. Override Button
3. Rail Bumper
4. Limit Switch
5. Suspended Frame and Rail Bumper
6. Limit Switch

This Page is intentionally left blank

SECTION 7

General Specifications and Operator Maintenance

7.1 GENERAL

This section of the manual provides additional necessary information to the operator for proper operation and maintenance of this machine.

The maintenance portion of this section is intended as information to assist the machine operator to perform daily maintenance tasks only and does not replace the more thorough Preventive Maintenance and Inspection Schedule included in the Service & Maintenance Manual.

7.2 OPERATING SPECIFICATIONS

Travel Speed	3.2 mph (5.2 km/h)
Maximum Work Load (Capacity) ANSI, ANSI Export, CSA, MOL70, GB Unrestricted	500 lb (227 kg)
Maximum Work Load (Capacity) CE/UKCA, AS/NZS Unrestricted	230 kg
Maximum Operating Slope	3°
Maximum Travel Grade (Gradeability)	30%
Maximum Travel Grade (Side Slope)	3°
Maximum Height (Stowed)	6 ft, 7 in (2.0 m)
Maximum Horizontal Platform Reach	23 ft, 9 in. (7.24 m)
Turning Radius (Curb to Curb)	15 ft, 3 in (4.65 m)
Turning Radius (Inside)	2 ft (0.61 m)
Maximum Wind Speed	28 mph (12.5 m/s)
Maximum Tire Load	6,900 lb (3130 kg)
Ground Bearing Pressure	75 psi (5.2 kg/cm ²)
System Voltage	48 volts
Battery Life per Charge	7 hours continuous
Battery Recharge Time	17 hours from full discharge

General Specifications and Operator Maintenance

Gross Machine Weight (Platform Empty)	15,100 lb (6804 kg)
---------------------------------------	---------------------

7.2.1 Capacities

Hydraulic Oil Tank	5 gal (19 L) w/ 10% air space
Hydraulic System (Including Tank)	9 gal (34.1 L)
Torque Hub, Drive*	25.5 oz (0.75 L)
*Torque hubs should be one half full of lubricant.	

7.2.2 Tires

Size	IN240/55-17.5	26x7x20
Load Range	E	N/A
Ply Rating	10	N/A
Tire Pressure	Foam-Filled	Solid

7.2.3 Dimensional Data

Machine Length (Stowed)	21 ft, 2 in (6.45 m)
Up and Over Platform Height	25 ft, 3 in (7.7 m)
Horizontal Reach @ Maximum Up and Over	23 ft, 9 in (7.24 m)
Machine Width	5 ft, 9 in (1.75 m)
Wheel Base	6 ft, 7 in (2.00 m)
Working Height	51 ft (15.54 m)
Platform Height	45 ft (13.72 m)
Track Width	5 ft (1.51 m)

Tail Swing (Any Position)	0
Ground Clearance	8 in (20 m)

7.2.4 Hydraulic Oil

Hydraulic System Operating Temperature Range	S.A.E. Viscosity Grade
+0° to + 180° F (-18° to +83° C)	10W
+0° to + 210° F (-18° to +99° C)	10W-20, 10W-30
+50° to + 210° F (+10° to +99° C)	20W-20

Note: Hydraulic oils must have anti-wear qualities at least to API Service Classification GL-3, and sufficient chemical stability for mobile hydraulic system service. JLG Industries recommends the use of standard UTTO.

Note: Machines may be quipped with biodegradable and non-toxic hydraulic oil. This is a fully synthetic hydraulic oil that possesses the same anti-wear and rust protection characteristics as mineral oils, but will not adversely affect the ground water or the environment when spilled or leaked in small amounts.

Note: Aside from JLG recommendations, it is not advisable to mix oils of different brands or types, as they may not contain the same required additives or be of comparable viscosities. If use of hydraulic oil other than standard UTTO is desired, contact JLG Industries for proper recommendations.

	Shell Naturelle HF-E46 (Recommended)	Mobil™ EAL Envirosyn H46 (Optional)	Shell Tellus S2 VX15 (Recommended)	Mobil™ DTE 10 Excel 15 (Optional)
SAE Grade	-	-	-	-
Specific Gravity	.921	.874	.872	.837
Pour Point, Max	-44°F (-42°C)	-49°F (-45°C)	-44°F (-42°C)	-65°F (-54°C)
Flash Point, Min.	611°F (322°C)	500°F (260°C)	392°F (200°C)	360°F (182°C)
Viscosity Information				
ISO VG	46	46	15	15
at 40° C	46 cSt	43 cSt	15.14 cSt	15.60 cSt
at 100° C	9.41 cSt	7.69 cSt	3.70 cSt	4.04 cSt
Viscosity Index	193	147	135	169

Fluid	Properties		Base			Classifications		
	Viscosity at 40° C (cSt, Typical)	Viscosity Index	Mineral Oils	Synthetic	Synthetic Polyol Esters	Readily Biodegradable*	Virtually Non-toxic**	Fire Resistant***
Shell Tellus S2 VX15 - Recommended	15	135	X				X	
Mobil DTE 10 Excel 15 - Optional	16	169	X				X	
Shell Naturelle HF-E46 - Recommended	46	193		X		X	X	
Mobil EAL Envirodyn H46 - Optional	46	147		X		X	X	

* Readily biodegradable classification indicates one of the following:
CO2 Conversion > 60% per EPA 560/6-82-003
CO2 Conversion > 80% per CEC-L-33-A-93
** Virtually Non-toxic classification indicates an LC50 > 5000 ppm per OECD 203
*** Fire Resistant classification indicates Factory Mutual Research Corp. (FMRC) Approval


7.2.5 Critical Stability Weights

Component	LB	KG
Counter weight	3,850	1746
Tire & Wheel (foam-filled)	207	94
Platform (4ft [1.2 m])	90	41
Platform (5 ft [1.5 m])	100	45
Battery (each)	120	54

⚠ WARNING

Do not replace items critical to stability with items of different weight or specification (for example: batteries, filled tires, platform) do not modify unit in any way to affect stability.

7.3 OPERATOR MAINTENANCE AND LUBRICATION DIAGRAM

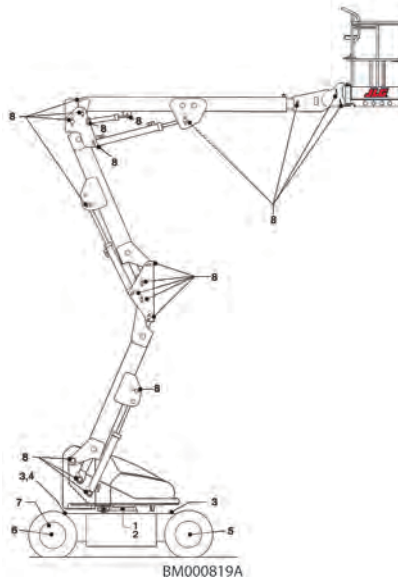

7.4 OPERATOR MAINTENANCE AND LUBRICATION

Table 8. Lubrication Specifications

KEY	SPECIFICATIONS
MPG	Multipurpose Grease having a minimum dripping point of 350 degrees F. Excellent water resistance and adhesive qualities; and being of extreme pressure type (Timken OK 40 pounds minimum).
EPGL	Extreme Pressure Gear Lube (oil) meeting API Service Classification GL-5 orMil-Spec Mil-L-2105.
HO	Hydraulic Oil. API Ser vice Classification GL-3
OG*	Open Gear Lube - Tribol Molub-Alloy 936 Open Gear Compound. (JLG PartNo. 3020027)
BG*	Bearing Grease (JLG Part No. 3020029) Mobilith SHA 460.
LL	Synthetic Lithium Lubricant, Gredag 741 Grease. (JLG Part No. 3020022)
EO	Engine (crankcase) Oil. Refer to Engine Operation Manual.
*MPG may be substituted for these lubricants, if necessary, but service intervals will be reduced.	

NOTICE

Lubrication intervals are based on machine operation under normal conditions. For machines used in multi-shift operations and/or exposed to hostile environments or conditions, lubrication frequencies must be increased accordingly.

- 1. Swing Bearing
 - Lube Point(s) - 2 Grease Fittings
 - Capacity - A/R
 - Lube - MPG
 - Interval - Every 3 months or 150 hrs of operation
 - Comments - Remote Access (Optional)

2. Swing Bearing/Worm Gear Teeth

Lube Point(s) - Grease Fittings

Capacity - Spray On

Lube - OG or Mobiltac375NC

Interval - A/R


Comments - If necessary install grease fittings into worm gear housing and grease bearings.



Note: OG will allow better cycle times than Mobiltac375NC, however Mobiltac375NC must be used in dusty environments. If the swing function becomes noisy and/or rough lubricate the bearing teeth.

⚠ CAUTION

Do not overgrease bearings. Overgreasing bearings will result in blowing outer seal in housing.

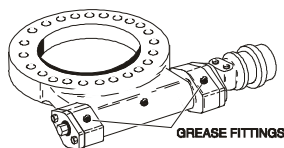

3. Hydraulic Tank

Lube Point(s) - Fill Cap

Capacity - 4 Gal. (15.1 L)

Lube - HO

Interval - Check Level daily; Change every 2 years or 1200 hours of operation.


Comments - On new machines, those recently overhauled, or after changing hydraulic oil, operate all systems a minimum of two complete cycles and recheck oil level in reservoir.



4. Hydraulic Return Filter

Interval - Change after first 50 hrs. and every 6 months or 300 hrs. thereafter.

Comments - Under certain conditions, it may be necessary to replace the hydraulic filter on a more frequent basis. A common symptom of a dirty filter is sluggishness experienced in hydraulic functions.

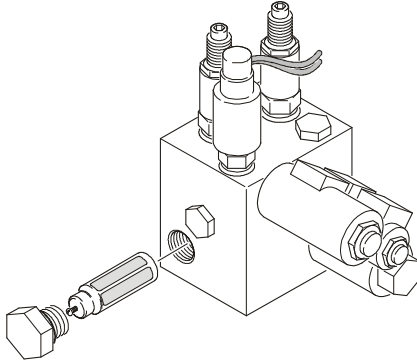

5. Wheel Drive Hub

Lube Point(s) - Level/Fill Plug

Capacity - 17 oz. (1/2 Full)

Lube - EPGL

Interval - Check level every 3 months or 150 hrs of operation; change every 2 years or 1200 hours of operation



6. Wheel Bearings
Lube Point(s) - Repack
Capacity - A/R
Lube - MPG
Interval - Every 2 years or 1200 hours of operation



7. Spindles/Bushing
Capacity - A/R
Lube - Lithium Lubricant
Interval - Every 2 years or 1200 hours of operation
Comments - At Spindle/Bushing Replacement; Coat I.D. of bushings prior to installing king pins.

8. Engine


Lube Point(s) - Fill Cap

Capacity - Refer to Engine Manual

Lube - EO

Interval - 3 Months or 150 hours of operation

Comments - Check level daily/Change in accordance with engine manual.

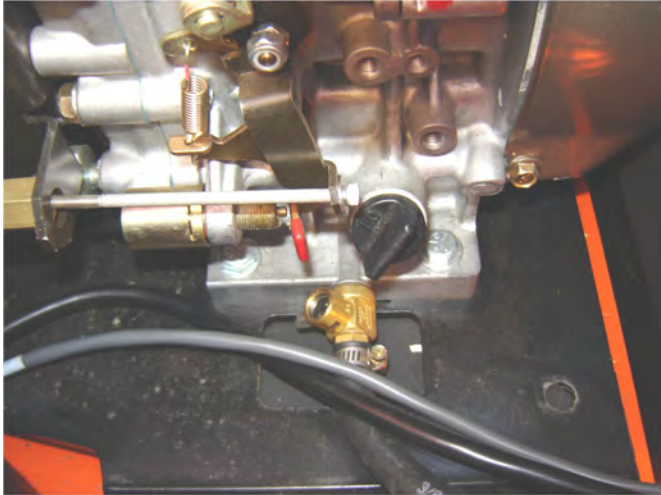

7.5 BATTERY CHARGER

Battery Charger Type	Delta-Q
Electrical System Voltage (DC)	48V (960 W)
Input	
AC Input Voltage	85-270V AC
Nominal AC Input Voltage	120 – 240V AC

Input Frequency	50 - 60Hz
Max. AC Input Current	Nominal 8.4A @ 120V AC Nominal 4.3A @ 240V AC
Ingress Protection	IP66
Operating Temperature	-40°F to 149°F (-40°C to 65°C)
Storage Temperature	-40°F to 185°F (-40°C to 85°C)
Output	
Nominal DC Output Voltage	48V
Max. DC Output Voltage	72V
Max DC Output Current	20A
Derated	> 104° (40°F)
Protection	
Output Reverse Polarity	Electronic Protection-Auto Reset
Output Short Circuit	Current Limited
AC Overload	Current Limited
DC Overload	Current Limited

7.6 BATTERY MAINTENANCE AND CHARGING

 WARNING

To avoid injury from an explosion, do not smoke or allow sparks or a flame near battery during servicing. Always wear eye and hand protection when servicing batteries.

7.6.1 Battery Charging (Daily)

WARNING

When battery charger is to be used, charging harness must be plugged into a grounded receptacle. If receptacle is not grounded and a malfunction should occur, the machine could cause serious electrical shock.

For increased battery life:

- Batteries should be kept at highest state of charge permitted by availability at job site and machine use. Charge batteries before they reach 20% state of charge. Avoid completely discharging the batteries.
- Fully charge the batteries each day the machine is used.
- Charge the batteries at available times between use. Flooded lead acid/AGM batteries do not develop a charging memory.
- If applicable, be sure the battery fluid covers the battery plates before charging. To avoid overflow, do not top off the fluid level until after charging.

CAUTION

When adding distilled water to the batteries, non-metallic containers and/or funnels must be used. Add water until electrolyte covers plates. Do not charge batteries unless electrolyte covers the plates.

Note: To avoid electrolyte overflow, add distilled water to batteries after charging. When adding water to the battery, fill only to level indicated or 3/8" above separators.

7.6.2 Battery Maintenance (Quarterly)

CAUTION

When adding distilled water to the batteries, non-metallic containers and/or funnels must be used. Add water until electrolyte covers plates. Do not charge batteries unless electrolyte covers the plates.

Note: To avoid electrolyte overflow, add distilled water to batteries after charging. When adding water to the battery, fill only to level indicated or 3/8" above separators.

1. Open battery compartment cover to allow access to battery terminals and vent caps.

2. Remove all vent caps and inspect electrolyte level of each cell. Electrolyte level should be to the ring approximately one inch from top of battery. Fill batteries with distilled water only. Replace and secure all vent caps.
3. Remove battery cables from each battery post one at a time, negative first. Clean cables with acid neutralizing solution (e.g., baking soda and water or ammonia) and wire brush. Replace cables and/or cable clamp bolts as required.
4. Clean battery post with wire brush then reconnect cable to post. Coat non-contact surfaces with mineral grease or petroleum jelly.
5. When all cables and terminal posts have been cleaned, ensure all cables are properly positioned and do not get pinched. Close battery compartment cover.
6. Power up machine and verify it functions properly.

7.7 TIRES AND WHEELS

7.7.1 Tire Damage

For polyurethane foam filled tires, JLG Industries, Inc. recommends that when any of the following are discovered, measures must be taken to remove the JLG product from service immediately and arrangements must be made for replacement of the tire or tire assembly.

- a smooth, even cut through the cord plies which exceeds 3 inches (7.5 cm) in total length
- any tears or rips (ragged edges) in the cord plies which exceed 1 inch (2.5 cm) in any direction
- any punctures which exceed 1 inch in diameter
- any damage to the bead area cords of the tire

If a tire is damaged but is within the above noted criteria, the tire must be inspected on a daily basis to insure the damage has not propagated beyond the allowable criteria.

7.7.2 Tire Replacement

JLG recommends a replacement tire be the same size, ply and brand as originally installed on the machine. Please refer to the JLG Parts Manual for the part number of the approved tires for a particular machine model. If not using a JLG approved replacement tire, we recommend that replacement tires have the following characteristics:

- Equal or greater ply/load rating and size of original
- Tire tread contact width equal or greater than original
- Wheel diameter, width, and offset dimensions equal to the original

- Approved for the application by the tire manufacturer (including inflation pressure and maximum tire load)

Unless specifically approved by JLG Industries Inc. do not replace a foam filled or ballast filled tire assembly with a pneumatic tire. When selecting and installing a replacement tire, ensure that all tires are inflated to the pressure recommended by JLG. Due to size variations between tire brands, both tires on the same axle should be the same.

7.7.3 Wheel Replacement

The rims installed on each product model have been designed for stability requirements which consist of track width and load capacity. Size changes such as rim width, center piece location, larger or smaller diameter, etc., without written factory recommendations, may result in an unsafe condition regarding stability.

7.7.4 Wheel Installation


It is extremely important to apply and maintain proper wheel mounting torque.

⚠ WARNING

Wheel nuts must be installed and maintained at the proper torque to prevent loose wheels, broken studs, and possible dangerous separation of wheel from the axle. Be sure to use only the nuts matched to the cone angle of the wheel.

Tighten the lug nuts to the proper torque to prevent wheels from coming loose. Use a torque wrench to tighten the fasteners. If you do not have a torque wrench, tighten the fasteners with a lug wrench, then immediately have a service garage or dealer tighten the lug nuts to the proper torque. Over-tightening will result in breaking the studs or permanently deforming the mounting stud holes in the wheels. The proper procedure for attaching wheels is as follows:

1. Start all nuts by hand to prevent cross threading. DO NOT use a lubricant on threads or nuts.
2. Tighten nuts in the following sequence:

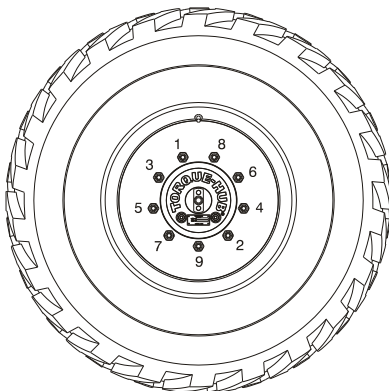

- 3. The tightening of the nuts should be done in stages. Following the recommended sequence, tighten nuts per wheel torque chart.
- 4. Wheel nuts should be torqued after first 50 hours of operation and after each wheel removal. Check torque every 3 months or 150 hours of operation.

Table 9. Wheel Torque Chart

TORQUE SEQUENCE		
1st Stage	2nd Stage	3rd Stage
40 ft. lbs. (55 Nm)	95 ft. lbs. (130 Nm)	170 ft. lbs. (230 Nm)

7.8 SUPPLEMENTAL INFORMATION ONLY APPLICABLE TO CE/UKCA MACHINES

The following information is provided in accordance with the requirements of the European Machinery Directive 2006/42/EC or Supply of Machinery (Safety) Regulations 2008 No. 1597.

The A-Weighted emission sound pressure level at the work platform is less than 70dB(A).

The vibration total value to which the hand-arm system is subjected does not exceed 2,5 m/s². The highest root mean square value of weighted acceleration to which the whole body is subjected does not exceed 0,5 m/s².

7.9 EC DECLARATION OF CONFORMITY

Manufacturer
JLG Industries, Inc.

Machine Type
Mobile Elevating Work Platform

Address
1 JLG Drive
McConnellsburg, PA 17233 USA

Model Type
E450AJ

Technical File
JLG EMEA B.V.
Polaris avenue 63,
2132 JH Hoofddorp
The Netherlands

EC-Number
2842

Certificate Number
KCEC4403

Contact/Position
Senior Manager — Product Safety & Reliability

Notified Body
Kuiper Certificering b.v.

Date/Place
Hoofddorp, Netherlands

Address
Van Slingelandtstraat 75, 7331 NM
Apeldoorn, The Netherlands

Reference Standards

- EN 55011:2009/A1:2010
- EN 61000-6-2:2005
- EN 60204-1:2018
- EN 280:2013+ A1:2015
- EN ISO 12100:2010

JLG Industries, Inc. hereby declares that the above mentioned machine conforms with the requirements of:

- 2006/42/EC — Machinery Directive
- 2014/30/EU — EMC Directive
- 2014/53/EU — RED Directive (If fitted with optional equipment)

Note: This declaration conforms with the requirements of annex II-A of the council directive 2006/42/EC. Any modification of the above described machine violates the validity of this declaration.

7.10 UKCA DECLARATION OF CONFORMITY

Manufacturer JLG Industries, Inc.	Machine Type Mobile Elevating Work Platform
Address 1 JLG Drive McConnellsburg, PA 17233 USA	Model Type E450AJ
Technical File JLG Industries UK Ltd Braunstone Frith Industrial Estate Unit 3 Sunningdale Road Leicester, LE3 1UX United Kingdom	AB-Number 0463
Contact/Position Director of Engineering — Europe	Certificate Number AVUK4403
Date/Place Leicester, United Kingdom	Approved Body Amtri Veritas
	Address Pierce Street, Macclesfield, SK11 6ER, England

Reference Standards

- EN 55011:2009/A1:2010
- EN 61000-6-2:2005
- EN 60204-1:2018
- EN 280:2013+ A1:2015
- EN ISO 12100:2010

JLG Industries, Inc. hereby declares that the above mentioned machine conforms with the requirements of:

- 2008 No. 1597 - Supply of Machinery (Safety) Regulations 2008
- 2016 No. 1091 - Electromagnetic Compatibility Regulations 20165
- 2017 No. 1206 - Radio Equipment Regulations 2017 (if fitted with optional equipment)

Note: This declaration conforms with the requirements of annex II-A of the Regulations 2008 No. 1597. Any modification of the above described machine violates the validity of this declaration.

[illegible]

[illegible]



Corporate Office
JLG Industries, Inc.
1 JLG Drive
McConnellsburg, PA 17233-9533 USA
☎ (717) 485-5161 (Corporate)
☎ (877) 554-5438 (Customer Support)
📠 (717) 485-6417

Visit our website for JLG Worldwide Locations.
www.jlg.com



OSHKOSH™